

Pillars and side trim

Upper A-pillar trim, removing and installing

Vehicles without side curtain protection


1 - Trim

◆ Removing:

- Remove seal - 4 - in area of A-pillar trim.
- Begin to unclip trim from the top.
- Pull trim from the top.

◆ Installing:

- Check clips - 3 -, if necessary replace and install in trim mounting.
- Clip trim in securely and check seal - 4 - is seated correctly.

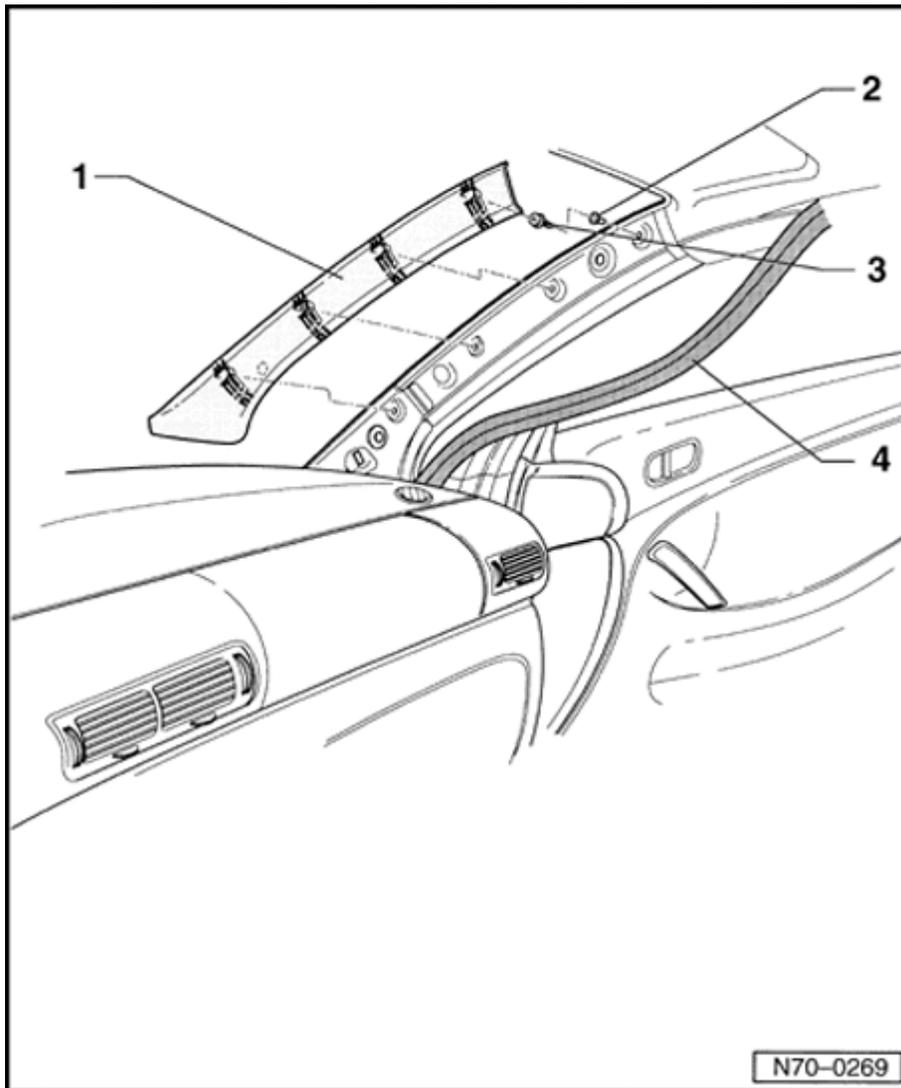

2 - Sleeve


- ◆ Mounting for clip - 3 -
- ◆ Qty.: 4

3 - Clip

- ◆ Qty.: 4

4 - Seal

- ◆ After installing the trim check for correct fit of seal.

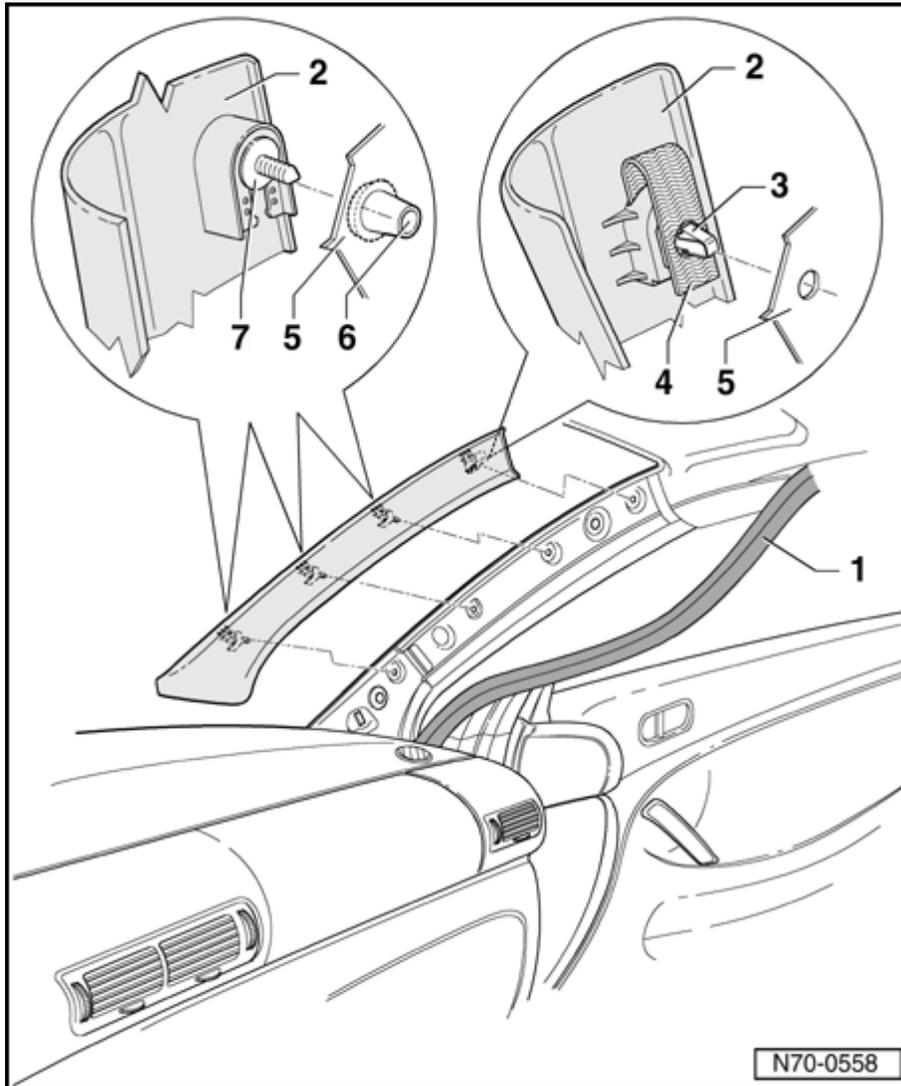

Vehicles with side curtain protection

Note:


Removal of upper A pillar trim cannot be performed without damage to mounting clips. Inspect A pillar for integrity before reinstalling.

1 - Seal

2 - Trim panel

◆ Removing:

- Pull seal - 1 - off in area of A pillar trim.
- Unclip trim beginning at top.
- Pull trim out upwards.
- If clip - 3 - remains in body, it must be squeezed together with pliers to remove without damage.

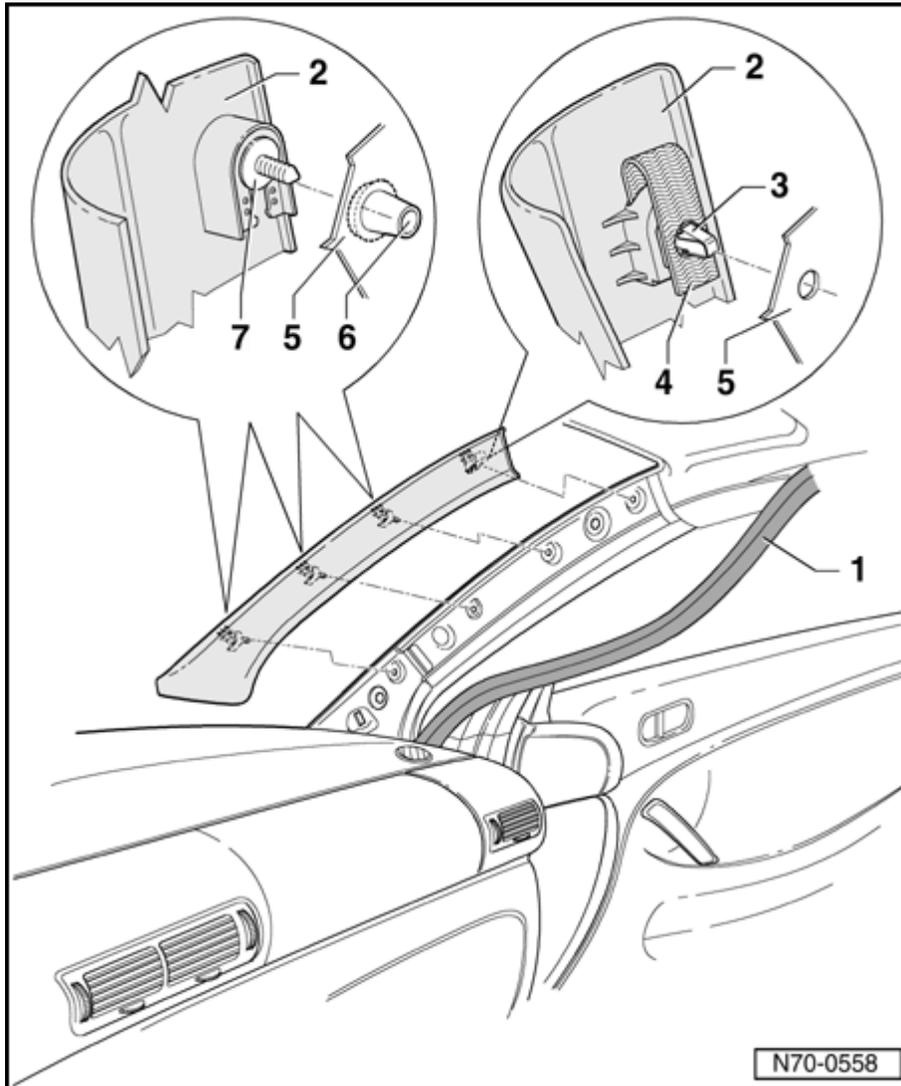

N70-0558

◆ Installing:

- Insert trim at same height as dash panel, clip in securely and check that seal - 1 - is positioned correctly.

3 - Clip

◆ Damaged during removal.

4 - Support strap

5 - A pillar

6 - Sleeve

◆ Clip mounting - 7 -

◆ Qty. 3

7 - Clip

◆ Qty. 3




Lower A-pillar trim, removing and installing

Driver side




- Pry off cover cap -1-
- Unscrew bolts -2- and -3-.
- Unclip trim -4- from sill plate and remove.

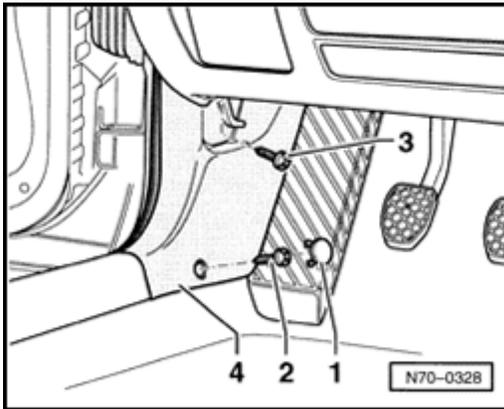

Passenger side



- Pry off cover cap -1-
- Unscrew bolts -2- and -3-.
- Unclip trim -4- from sill plate and remove.

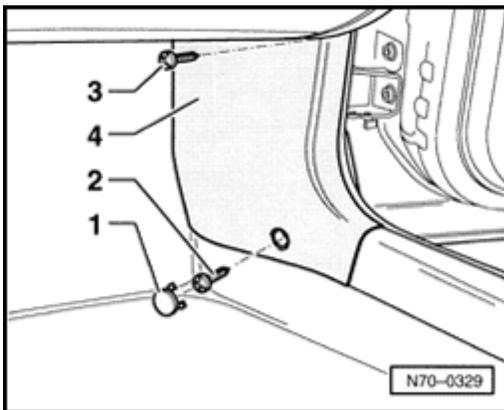




Upper B-pillar trim, removing and installing

Vehicles without side curtain protection


Removing

Note:


Illustration for one side only, symmetrically opposite for the other side.

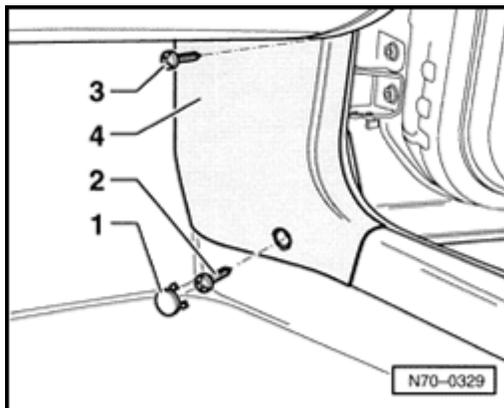


- Pry off cover cap -1-.
- Unscrew bolts -2- and -3-.
- Unclip trim -4- from sill plate and remove.

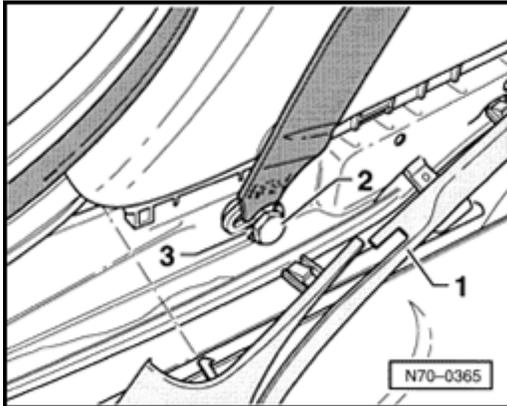

- A
- Sill plate -1- un-clipped from front to rear of B-pillar.
 - Unscrew hex head bolt -2- (40 Nm).
 - Remove belt end -3-.

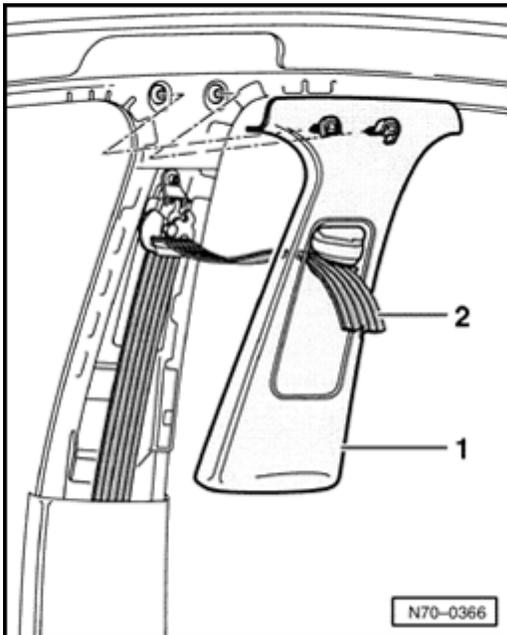


- A
- Unclip trim -1- first on the sides, then in upper area of B-pillar.
 - Pull out seatbelt -2- from trim.

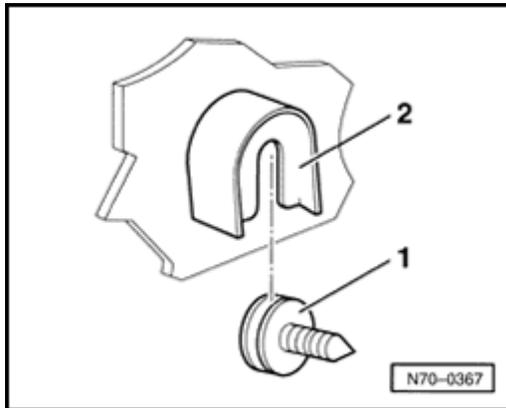

Installing

A

- Check clips -1- replace if necessary and insert in mounting of trim -2-.
- Pull seatbelt with insert strap and buckle through the trim.
- Place trim in installed position, therefore check for correct fit of belt height adjustment.
- Bolt belt buckle to rocker panel (40 Nm).
- Clip in sill plate.
- Install lower A-pillar trim.
- Make sure seals are correctly seated.

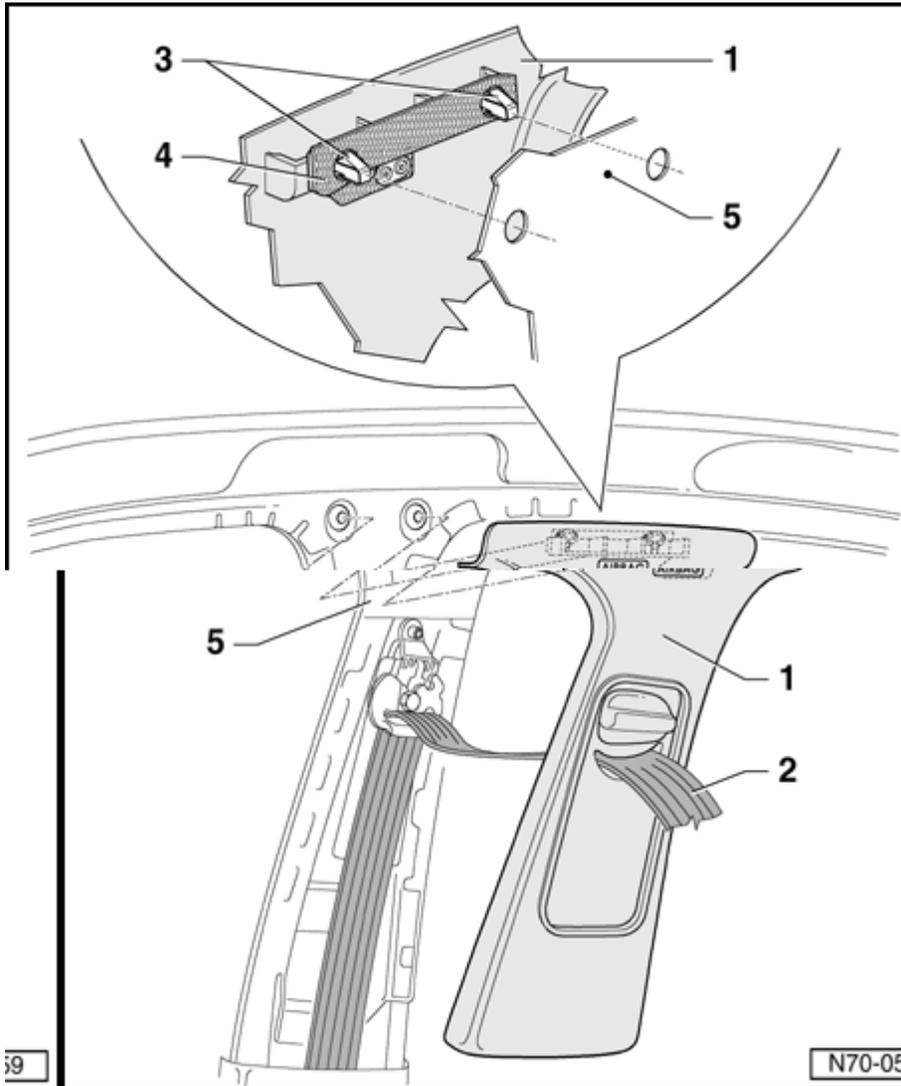

Vehicles with side curtain protection

Note:

Removal of upper B pillar trim cannot be performed without damage to mounting clips. Inspect B pillar for integrity before reinstalling.

1 - Trim panel

2 - Seat belt

3 - Clips

◆ Damaged during removal.

4 - Support strap


5 - B pillar



Removing


Note:

Illustration for one side only, symmetrically opposite for the other side.

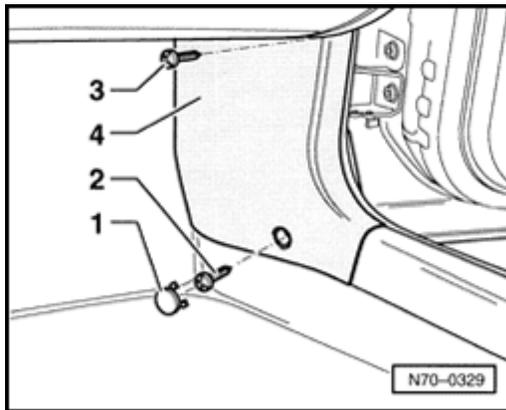


A

- Lift off cover cap -1-.
- Remove bolts -2- and -3-.
- Unclip trim -4- from sill panel strip and remove.

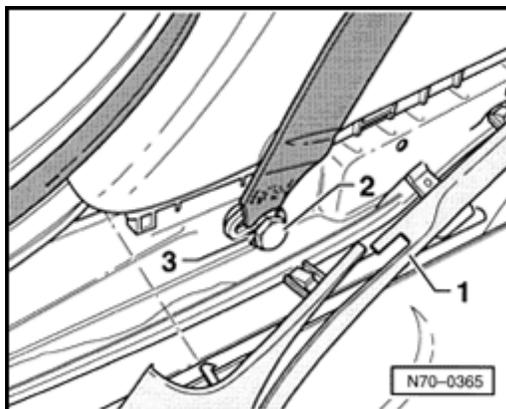

A


- Unclip sill panel strip -1- from front to behind B pillar.
- Remove hexagon bolt -2- (40 Nm).
- Remove belt fitting -3-.

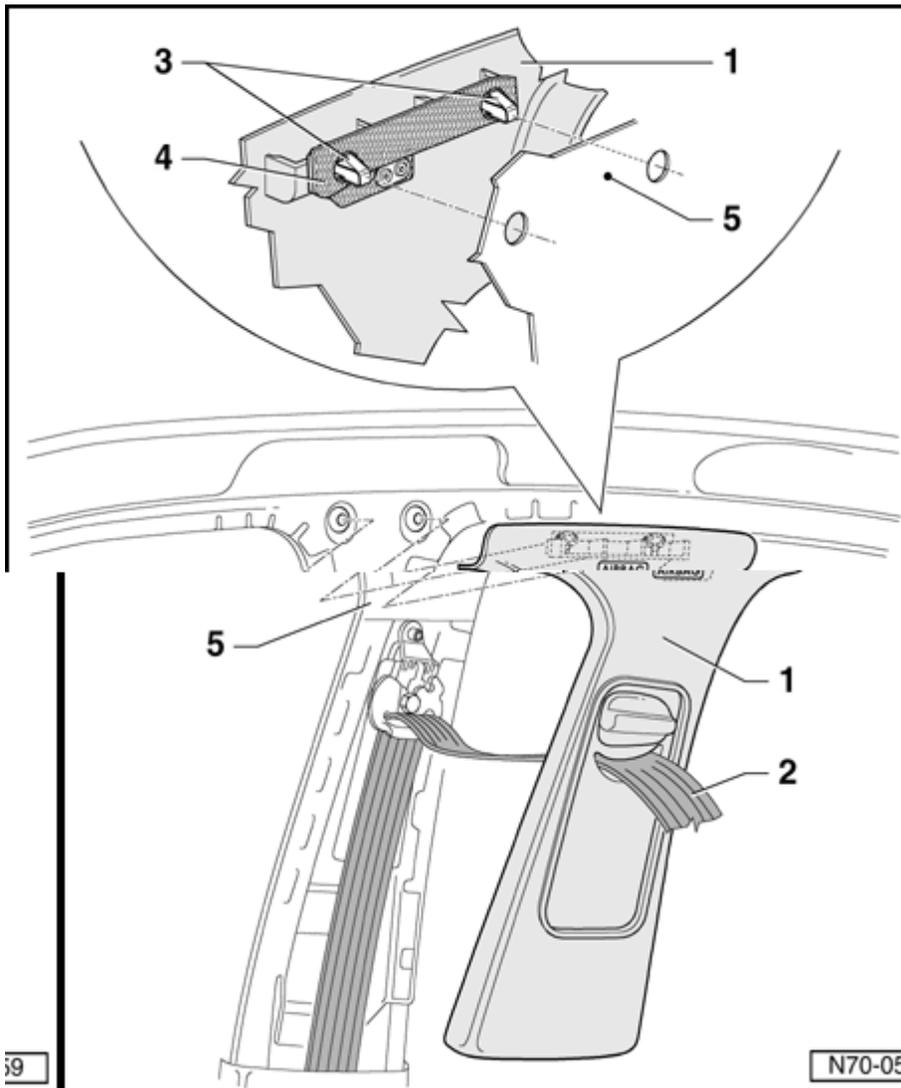

- Unclip trim - 1 - from B pillar, first at sides and then at top.
- Pull seat belt - 2 - out of trim.
- If clip - 3 - remains in body, it must be squeezed together with pliers to remove without damage.


Installing

- Pull seat belt - 2 - with tongue and fitting through trim - 1 -.
- Position trim in installation position and clip into B pillar. Ensure seat belt height adjustment fitting is correctly fitted.

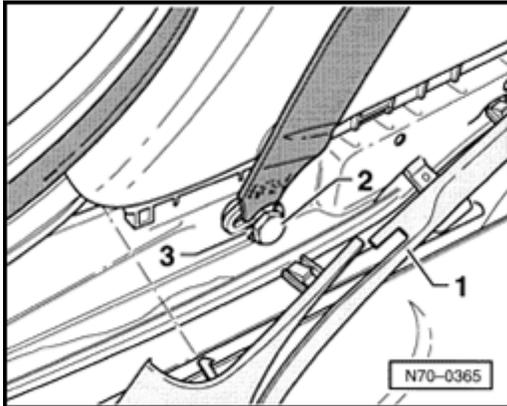

A


- Using bolt -2- screw seat belt fitting -3- onto longitudinal member (sill) (40 Nm).
- Clip sill panel strip -1- in.
- Install lower A pillar trim.
- Ensure seal is correctly positioned.

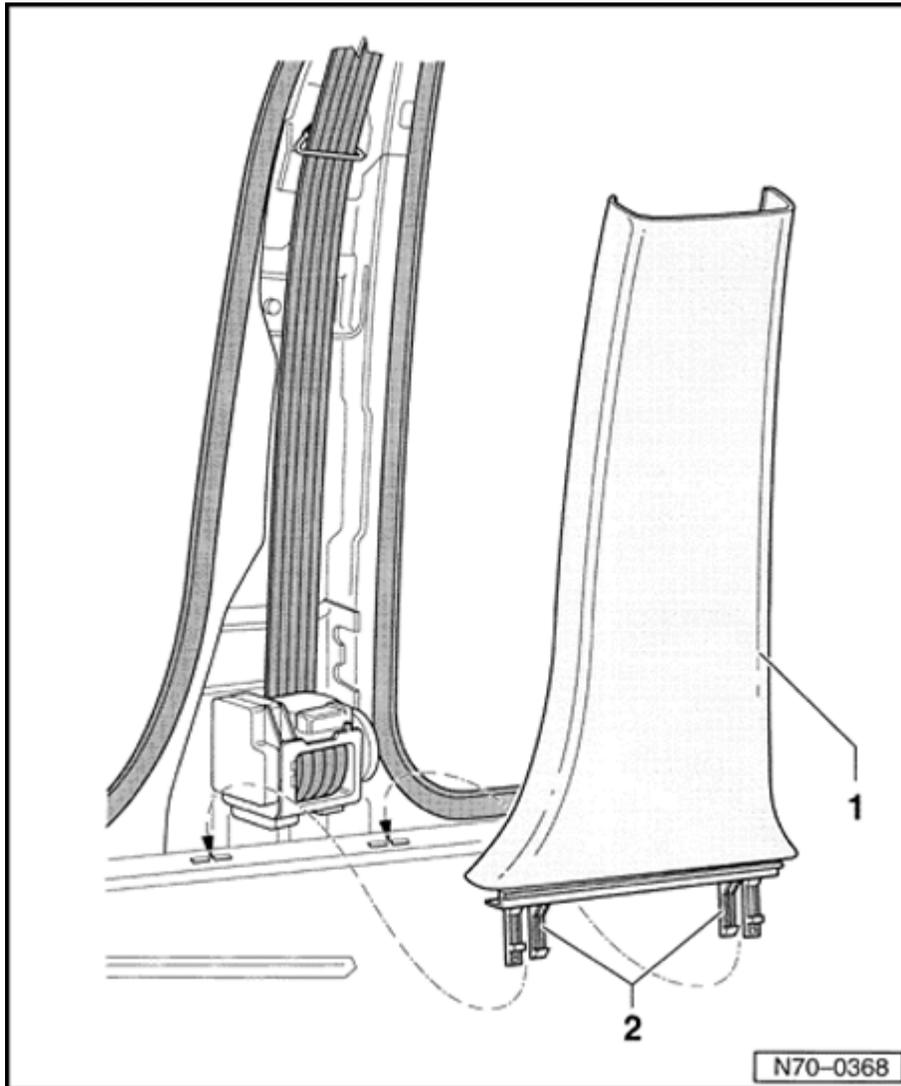

Lower B-pillar trim, removing and installing

Removing

- Remove lower A-pillar trim ⇒ [page 70-31](#) .
- Unclip sill plate from front to rear of B-pillar.
- Remove upper B-pillar trim ⇒ [page 70-32](#) .
- Unclip trim -1- from upper to lower from B-pillar.
- Press hook -2- toward B-pillar and pull out trim from mounting in sill panel.

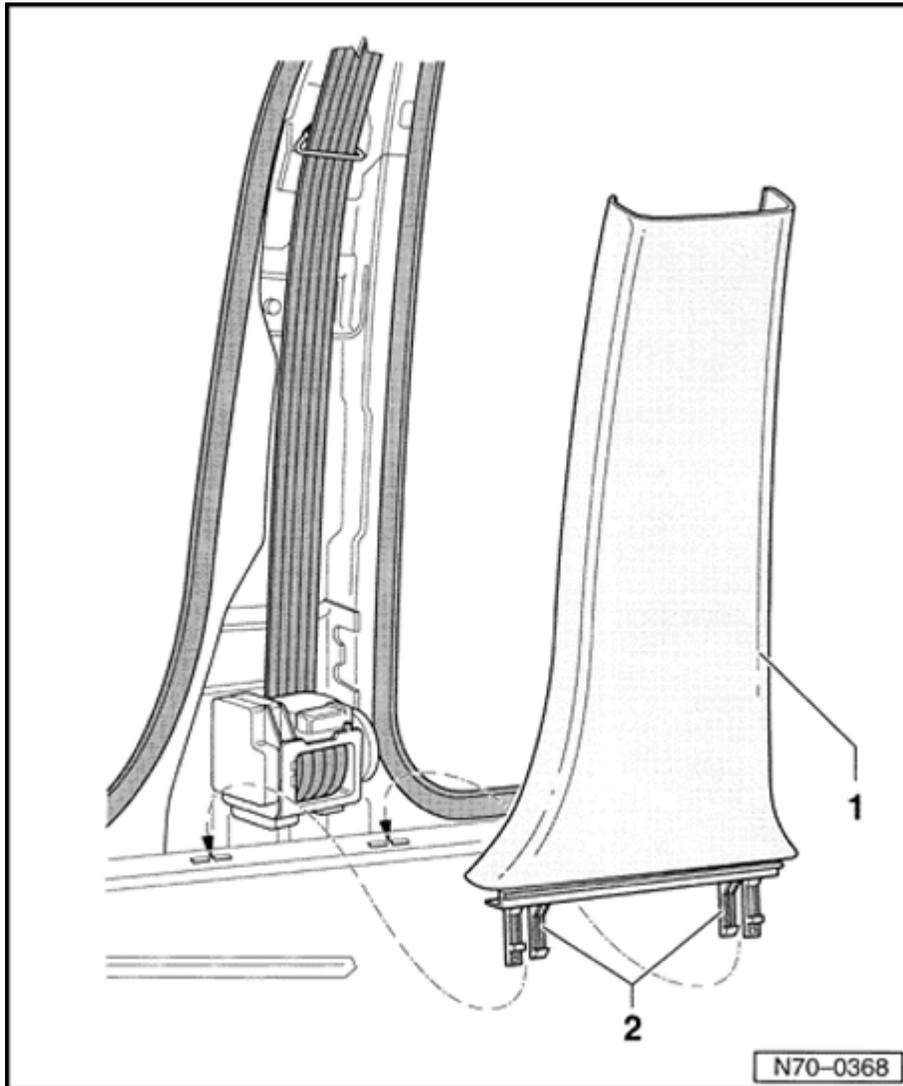


Installing

- Install in reverse order of removal.

Note:

After installing the trim, check for correct fit of door seals.

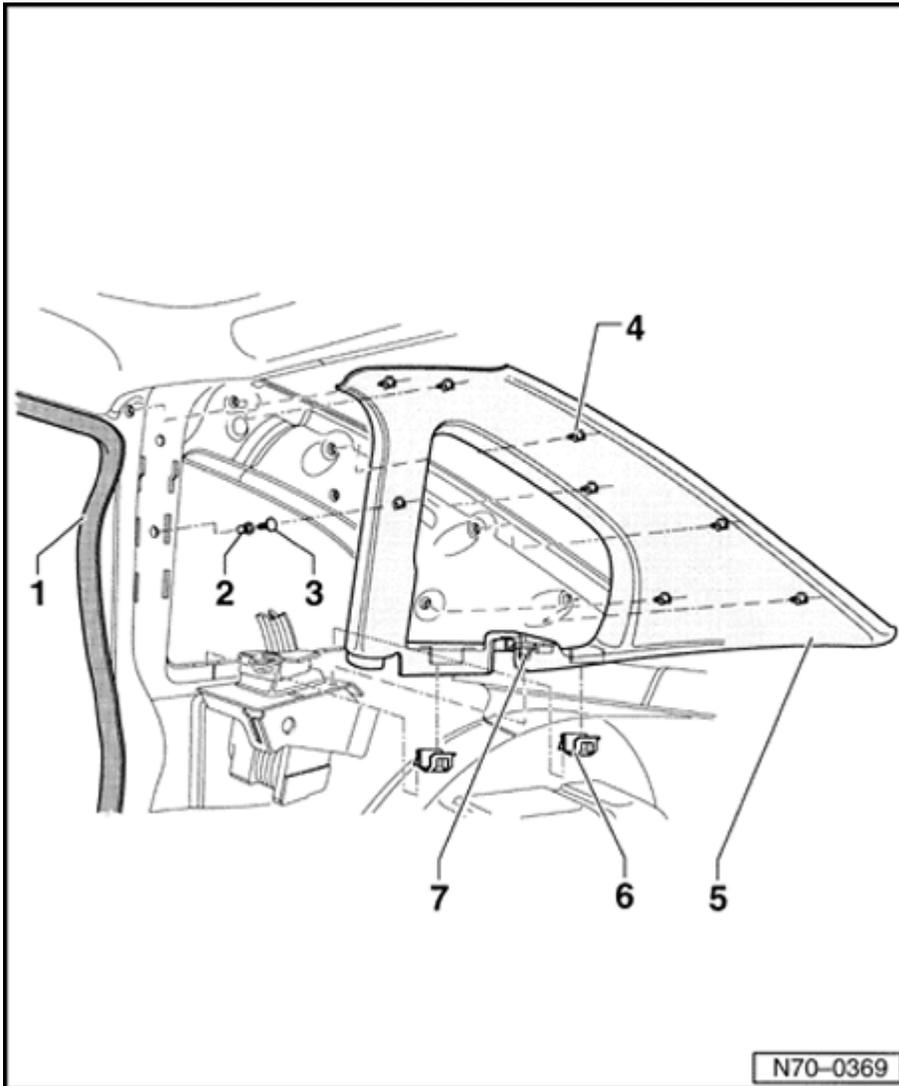

Upper C/D-pillar trim, removing and installing

Vehicles without side curtain protection

1 - Seal

2 - Sleeve

◆ Qty.: 8

3 - Clip

◆ Qty.: 8


4 - Mounting

◆ Component of trim

5 - Trim

◆ Removing:

- Remove seal - 1 - in area of trim from C-pillar.
- Begin un-clipping trim - 5 - from the top.
- Unlock seatback and fold forward, pull trim - 5 - upward out of clips - 6 -.

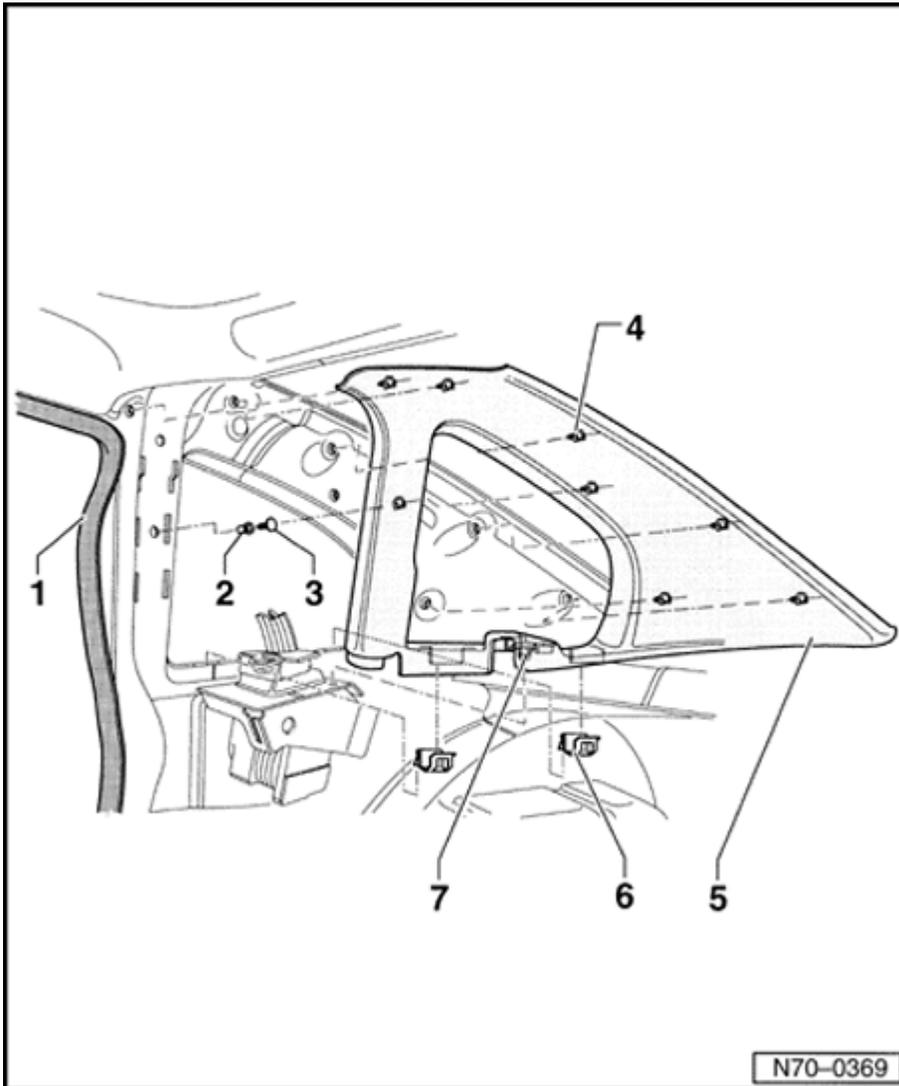


◆ Installing:

- Check and if necessary replace clips - 3 - and clip - 7 -, and install in trim - 4 - mounting.
- Check and if necessary replace clips - 6 - and insert mounting to window flange.
- Clip trim into clips - 6 - securely and make sure seal - 1 - is seated correctly.

6 - Clip

- ◆ Qty.: 2

7 - Clip

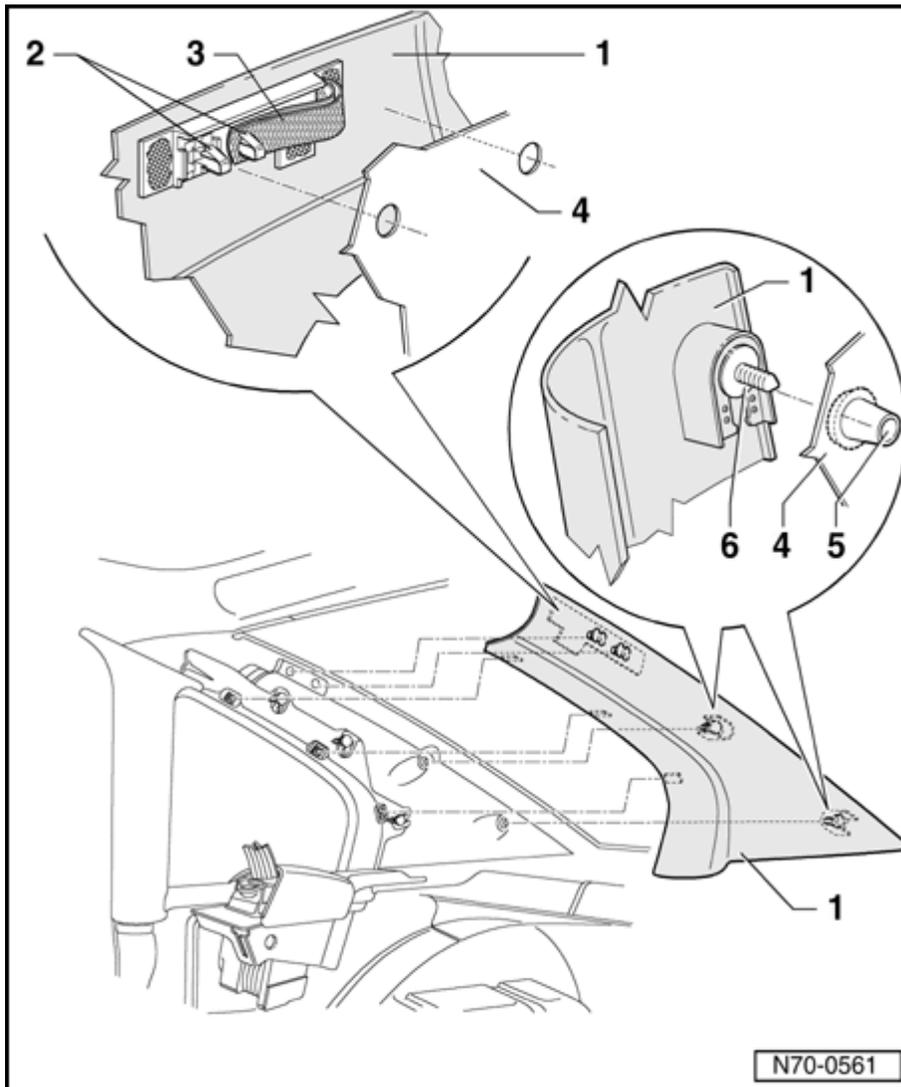

Vehicles with side curtain protection

Note:

Removal of upper C/D pillar trim cannot be performed without damage.


1 - Trim (upper)

◆ Removing:

- Unclip trim, starting at top.
- If a clip - 2 - remains in the body, it must be pinched together using pliers to remove it from the body without causing damage.

◆ Installing:

- Position trim on side panel and clip in securely.

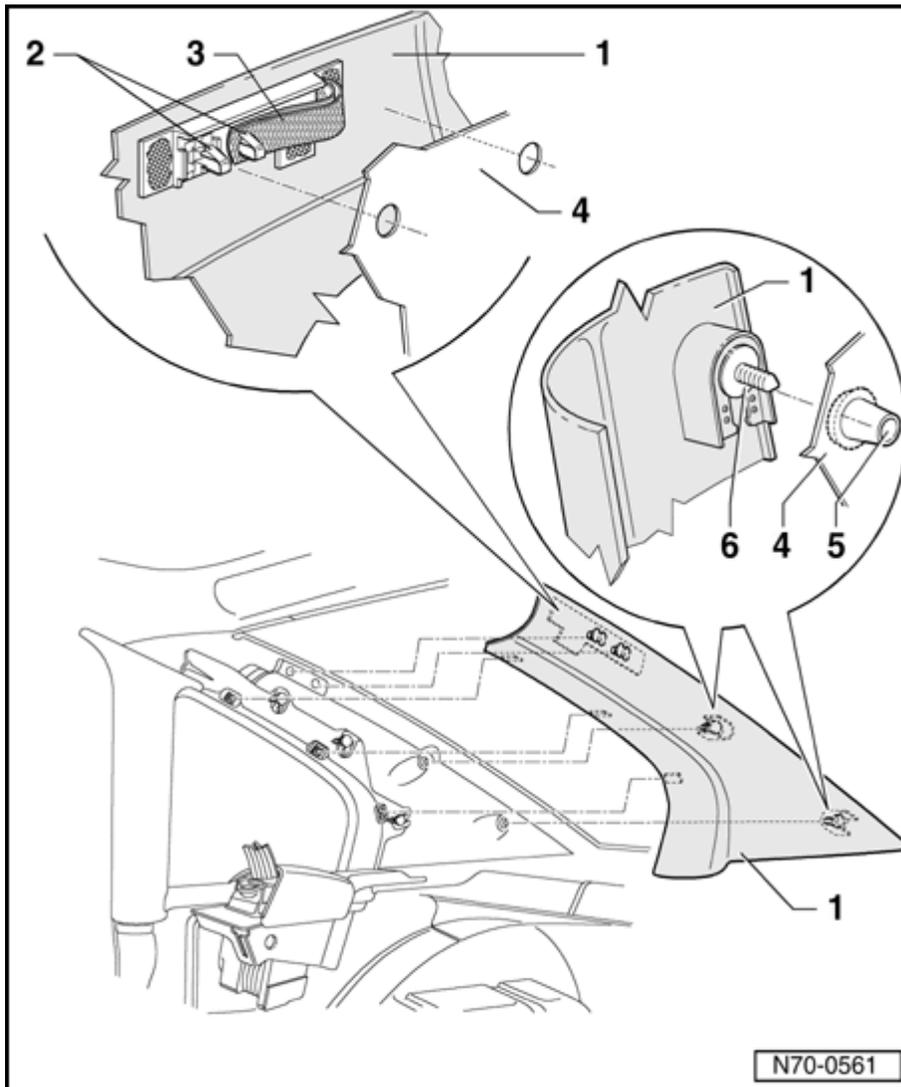**2 - Clip**

◆ Qty. 2


3 - Support strap**4 - Side panel****5 - Sleeve**

◆ Mounting for clip - 6 -

◆ Qty. 2

6 - Clip

◆ Qty. 2

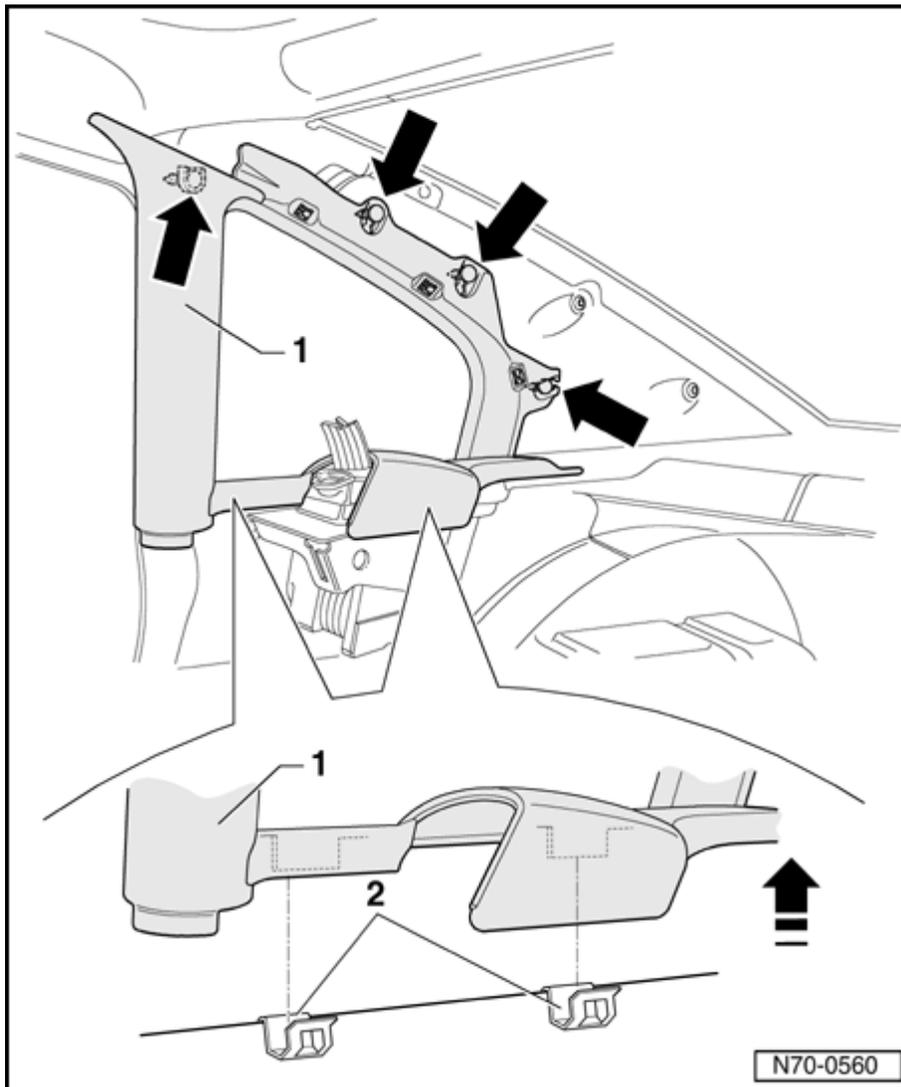

1 - Trim (lower)

◆ Removing:


- Pull door seal off C pillar in area of trim.
- Unclip trim, starting at top.
- Release seat backrest and fold forward, pull trim - 1 - upwards out of clips -2-.

◆ Installing:

- Position trim on side panel and clip in securely.
- Fit door seal.

2 - Clip

◆ Qty. 2

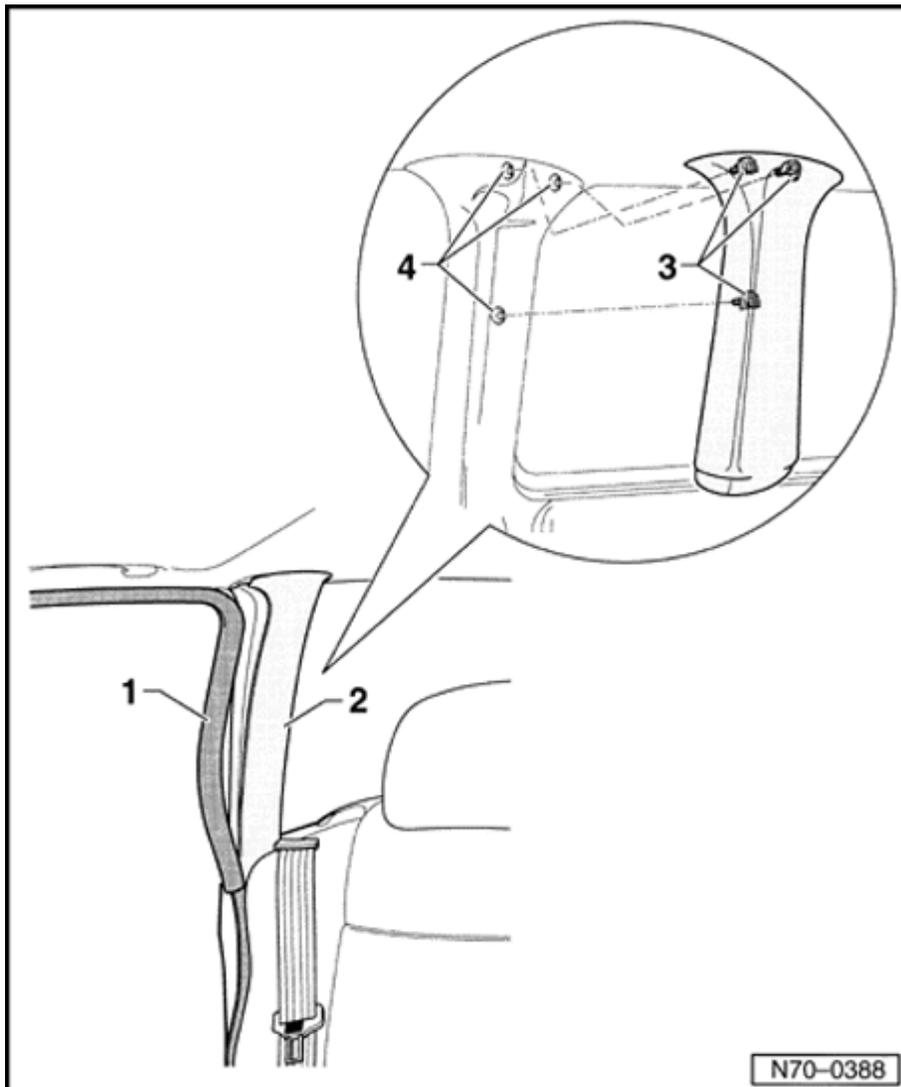


Upper C-pillar trim, removing and installing (wagon)

Vehicles without side curtain protection

Removing

- Remove seal -1- in trim area -2-.
- Pry out trim -2- from C-pillar with aid of installation lever 80-200 and pull out from the top.

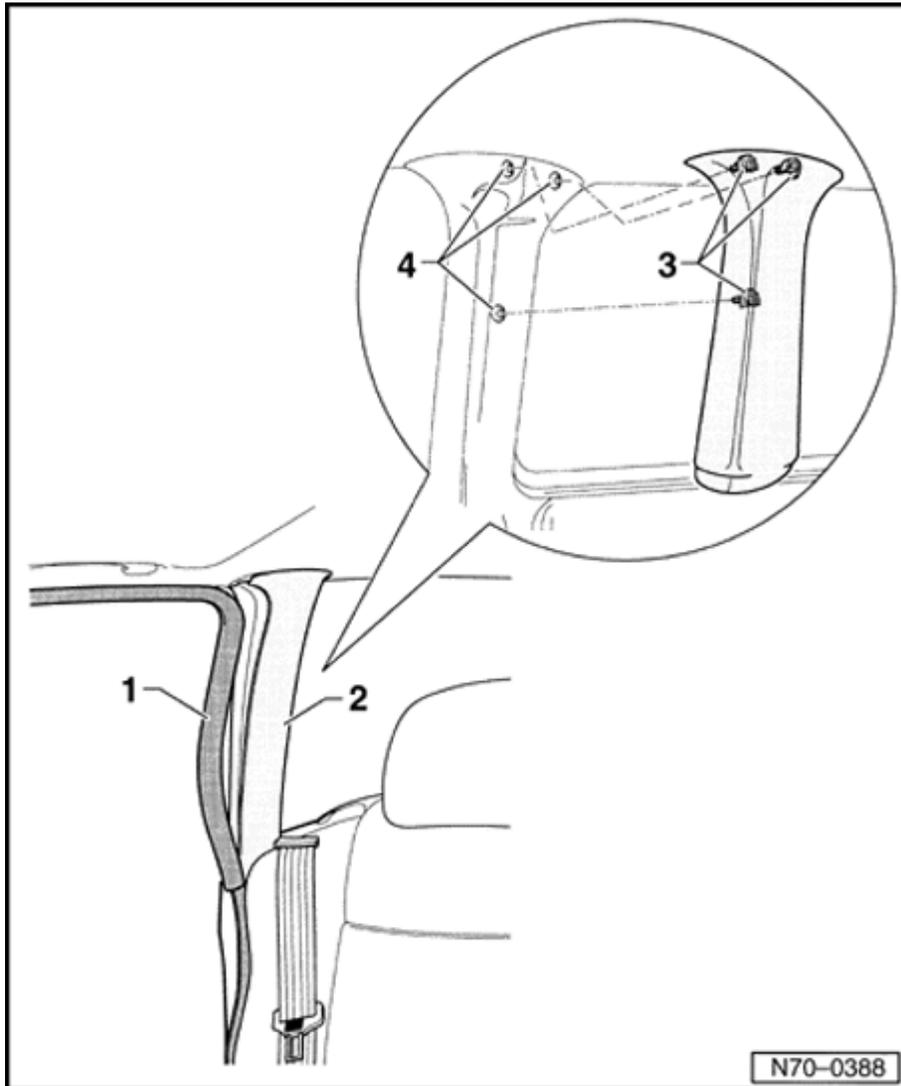


Installing

Note:

Check clips -3- and mounting sleeves -4- and replace if necessary before installing the trim -2-.

- Insert clips -3- into trim mounting -2- and press in sleeves -4- in holes of C-pillar.
- Clip trim -2- to C-pillar.
- Make sure seal -1- is seated correctly again.

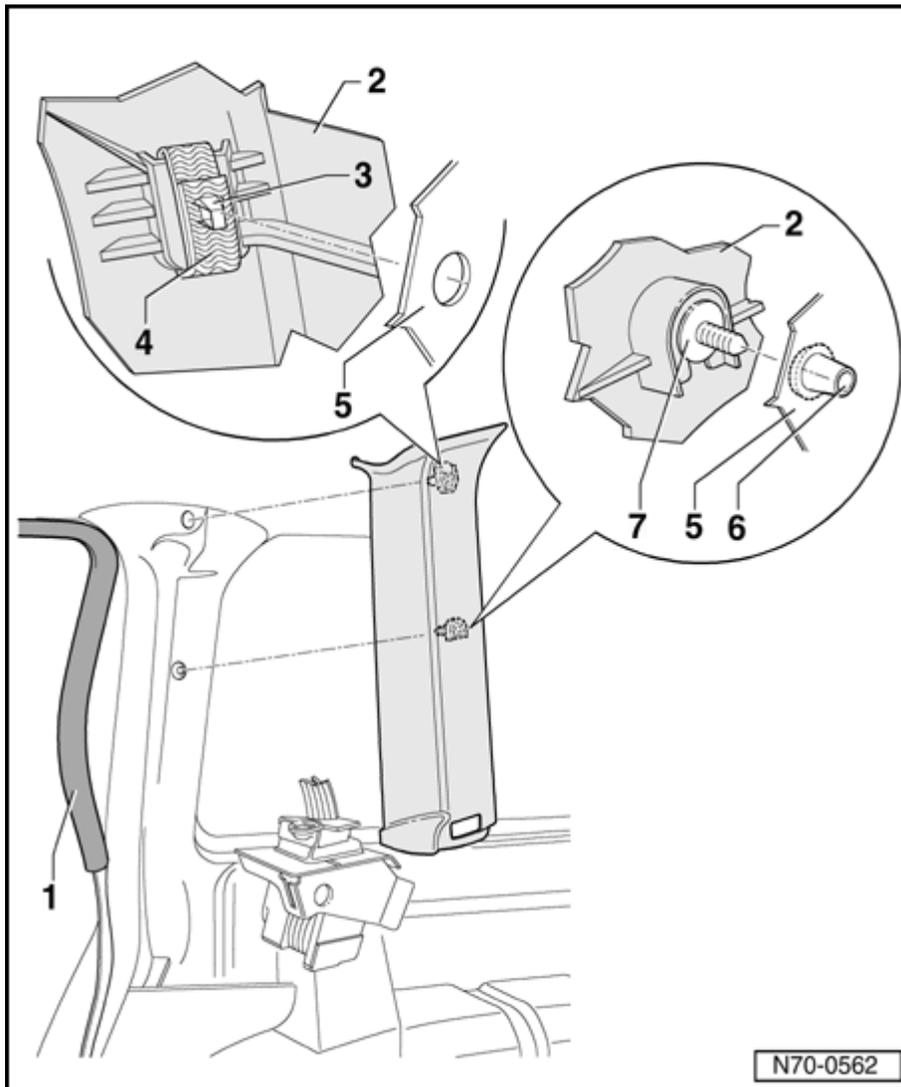

Vehicles with side curtain protection

Note:


Removal of upper C pillar trim cannot be performed without damage.

1 - Seal

2 - Trim panel

◆ Removing:

- Pull seal - 1 - off in area of C pillar trim.
- Starting from top unclip trim - 2 -, using lever 80-200.
- Pull trim out upwards.
- If a clip - 3 - remains in the body, it must be pinched together using pliers to remove without causing damage.

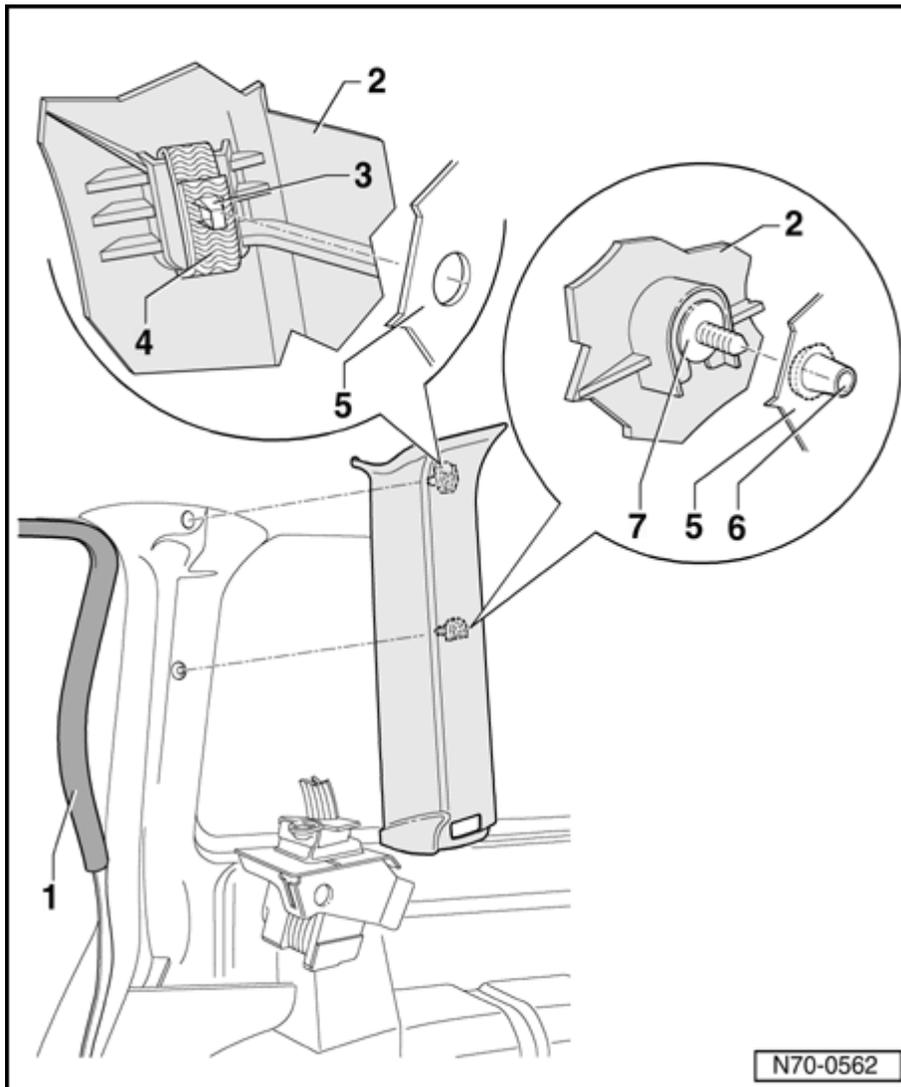

◆ Installing:

- Position trim in installation position and clip securely into C pillar.
- Ensure seal - 1 - is positioned correctly.

3 - Clip

- ◆ Damaged upon removal.


4 - Support strap

5 - C pillar

6 - Sleeve

- ◆ Mounting for clip - 7 -


7 - Clip

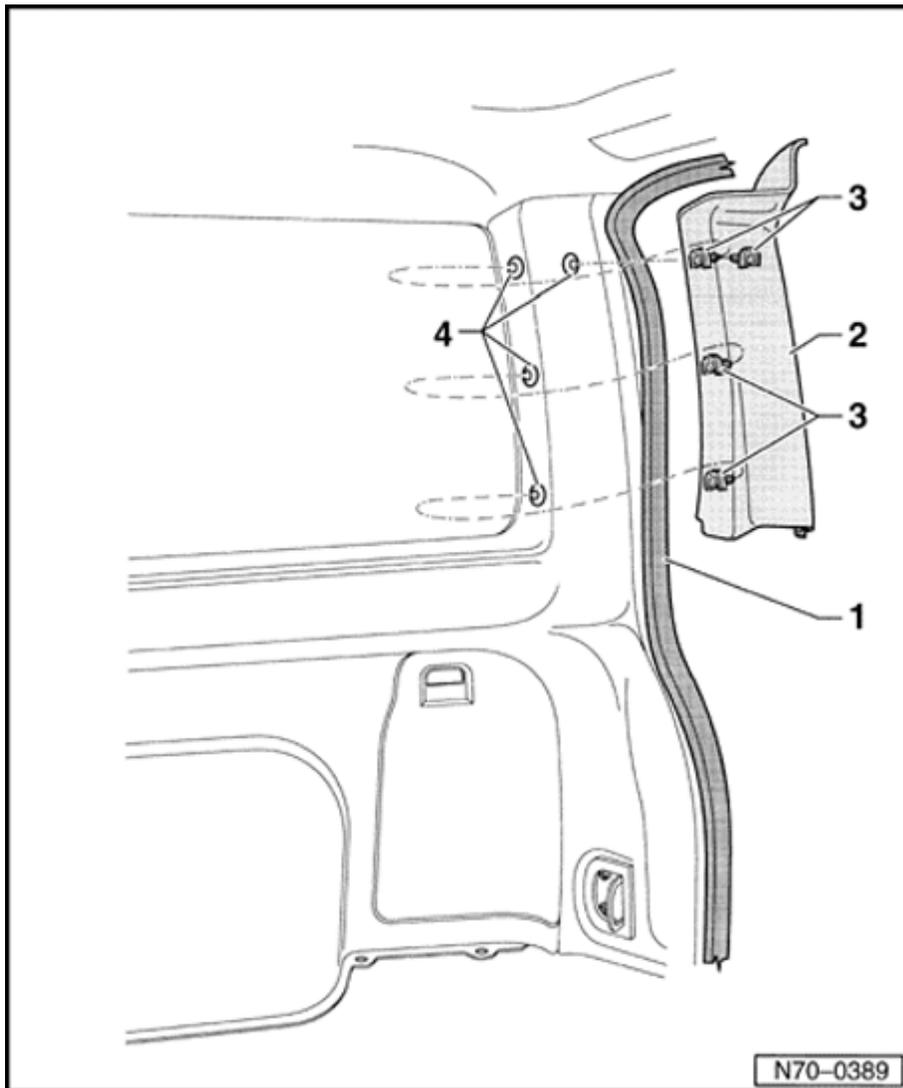

Upper D-pillar trim, removing and installing (wagon)

Removing

- Remove seal -1- in trim area -2-.
- Pry out trim -2- from D-pillar with aid of installation lever 80-200 and pull out from the top.

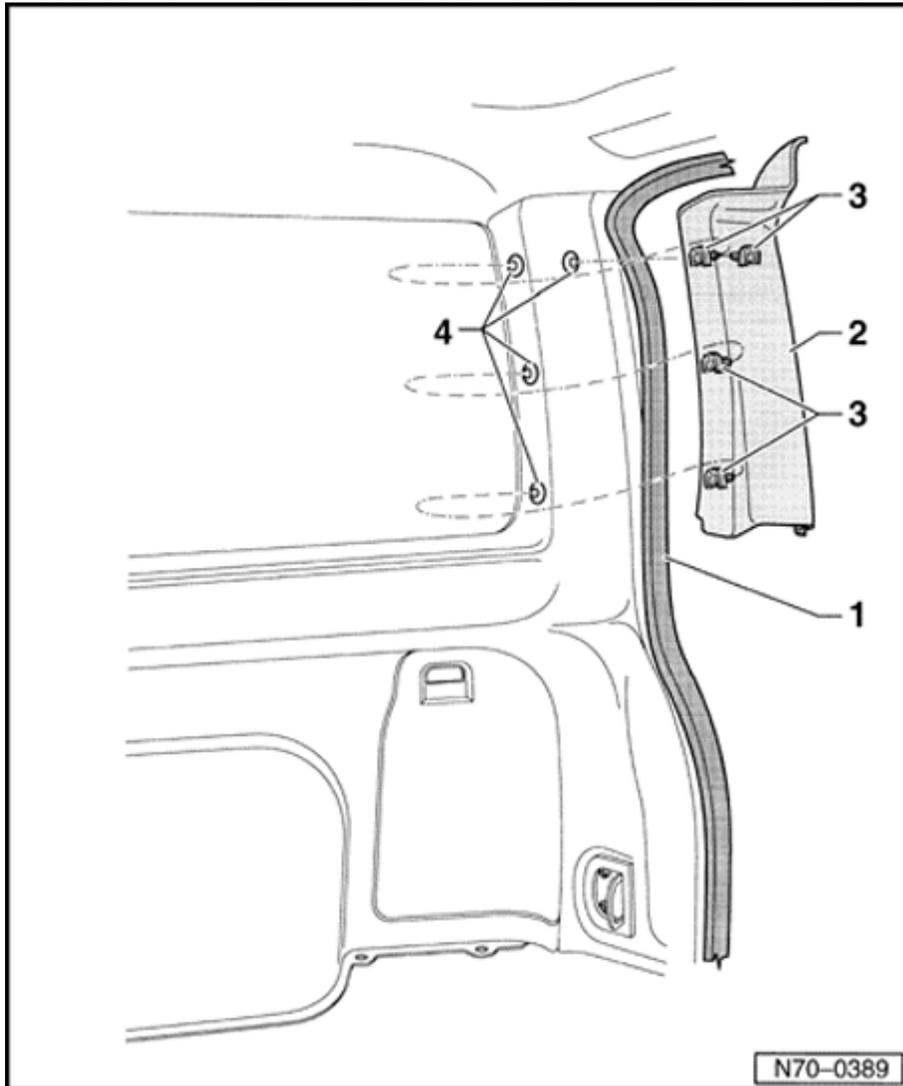

Installing

Note:

Check and replace if necessary clips -3- and mounting sleeves-4- before installing the trim -2-.

- Insert clips -3- into trim mounting -2- and press in sleeves -4- in holes of C-pillar.
- Insert trim -2- in lower area behind lateral trim and clip to D-pillar.
- Make sure seal -1- is seated correctly.




Lower C-pillar trim, removing and installing

Removing

Note:


Illustration for one side only, symmetrically opposite for the other side.

- Unlock seatback for rear seat bench and fold forward.

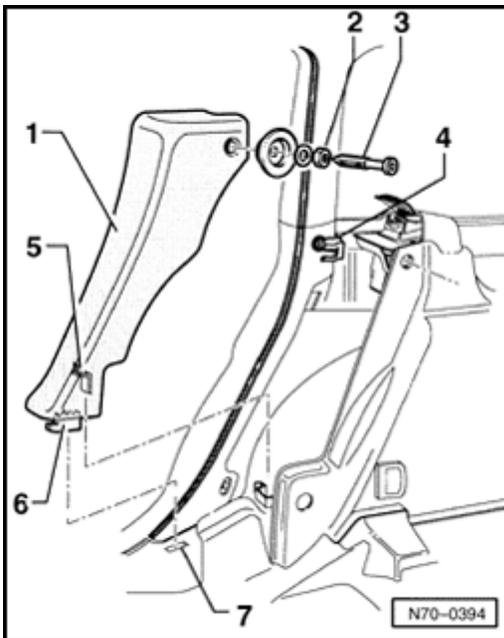

A

- Loosen hex nut -2- and unscrew lock bolt -3-.
- Pull cushion -1- in upper area out of clip -4-, press lower tab -6- to the back from sill plate -7- and remove with tab -5- upward.

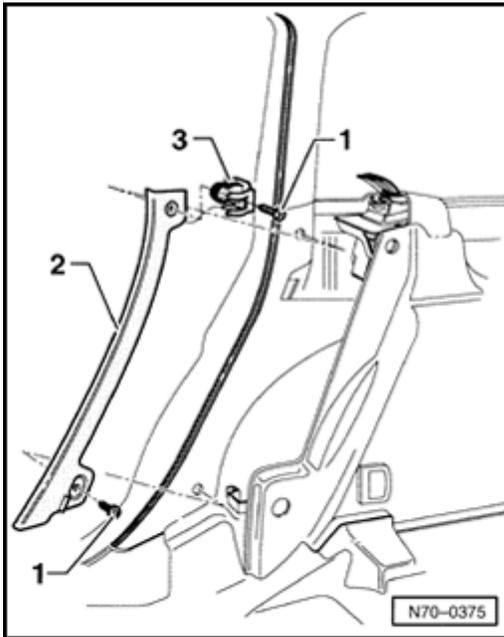

A


- Unscrew bolts -1-
- Remove trim -2- from clip -3- and from C-pillar.

Installing

- Install in reverse order of removal.

Note:

After installing the trim, check for correct fit of door seals.

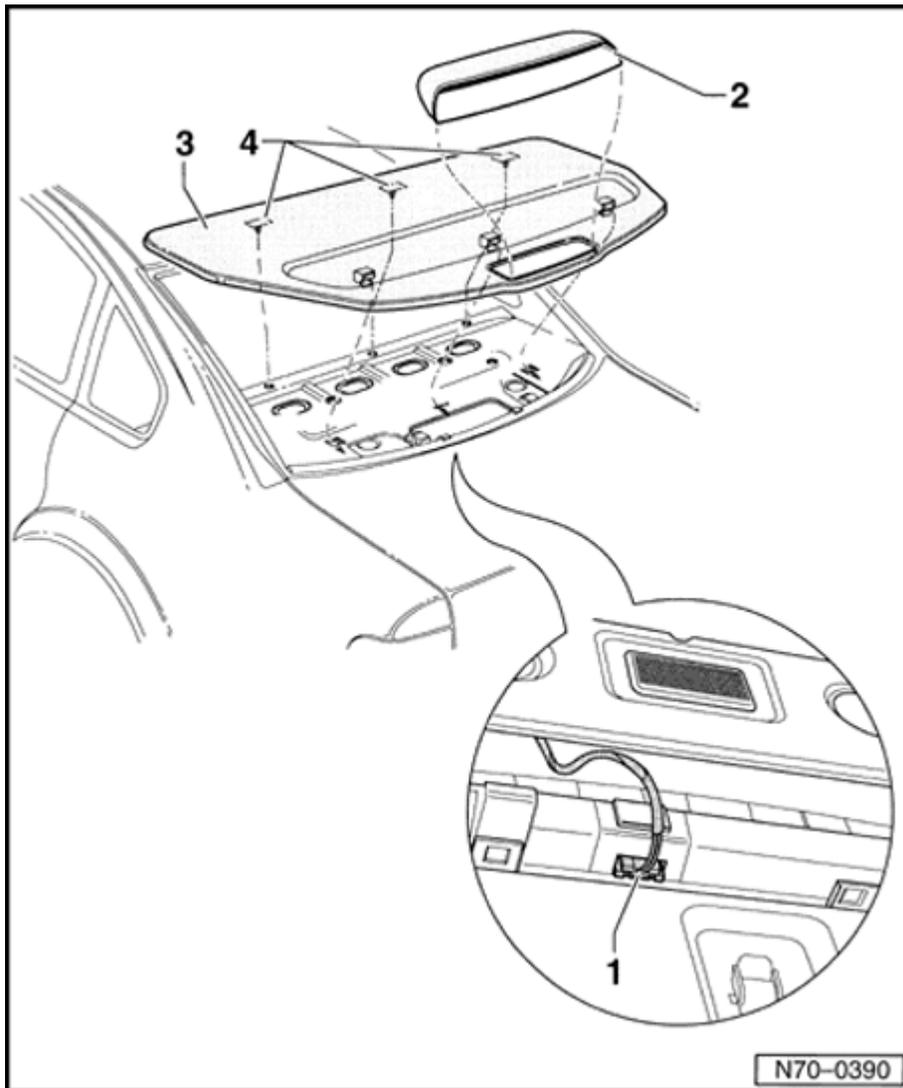

Hat shelf, removing and installing

CAUTION!


Before working on electrical system, disconnect battery Ground strap.

Removing

Note:

Before disconnecting the battery, obtain radio anti-theft code.

- Fold rear seatback frame forward.
- Remove connector -1- from high mounted brake lamp -2-.
- Unclip hat shelf -3- and remove.

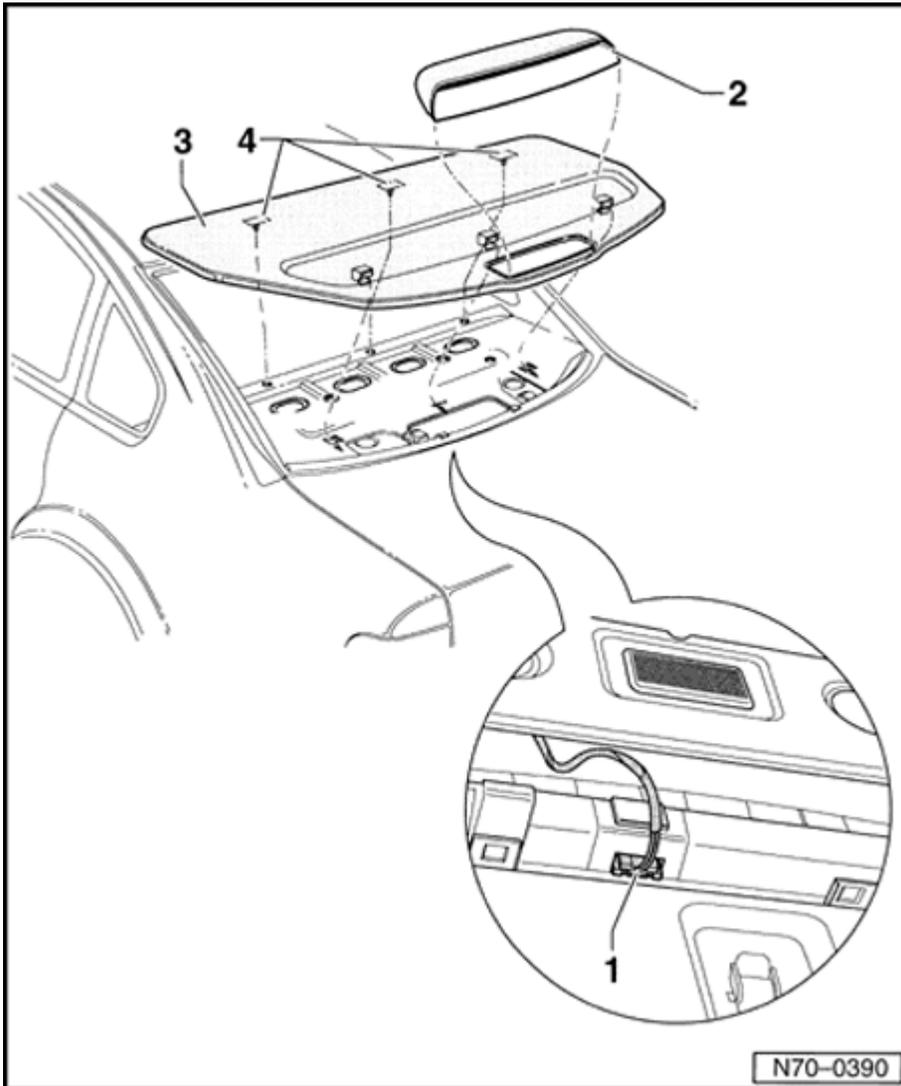

Installing

- Install in reverse order of removal.

Notes:

- ◆ Check clips -4- and if necessary replace before installing hat shelf -3-.
- ◆ After disconnecting the battery make sure that the vehicle equipment (radio, clock and power window regulators) are checked according to repair manual and/or operating instructions.