


COOLING SYSTEM

OUTLINE	3- 2
COOLANT FLOW CHART.....	3- 2
SPECIFICATIONS.....	3- 3
TROUBLESHOOTING GUIDE	3- 3
COOLANT	3- 4
INSPECTION.....	3- 4
REPLACEMENT.....	3- 4
RADIATOR CAP	3- 5
INSPECTION.....	3- 5
RADIATOR	3- 6
REMOVAL AND INSTALLATION.....	3- 6
INSPECTION.....	3- 6
WATER PUMP	3- 7
REMOVAL.....	3- 7
INSPECTION.....	3- 8
INSTALLATION.....	3- 8
THERMOSTAT	3- 9
REMOVAL.....	3- 9
INSPECTION.....	3- 9
INSTALLATION.....	3- 9
COOLING FAN	3-10
SYSTEM CIRCUIT.....	3-10
CIRCUIT INSPECTION.....	3-11
FAN MOTOR.....	3-11
WATER THERMO SWITCH.....	3-12

3 OUTLINE

OUTLINE

COOLANT FLOW CHART

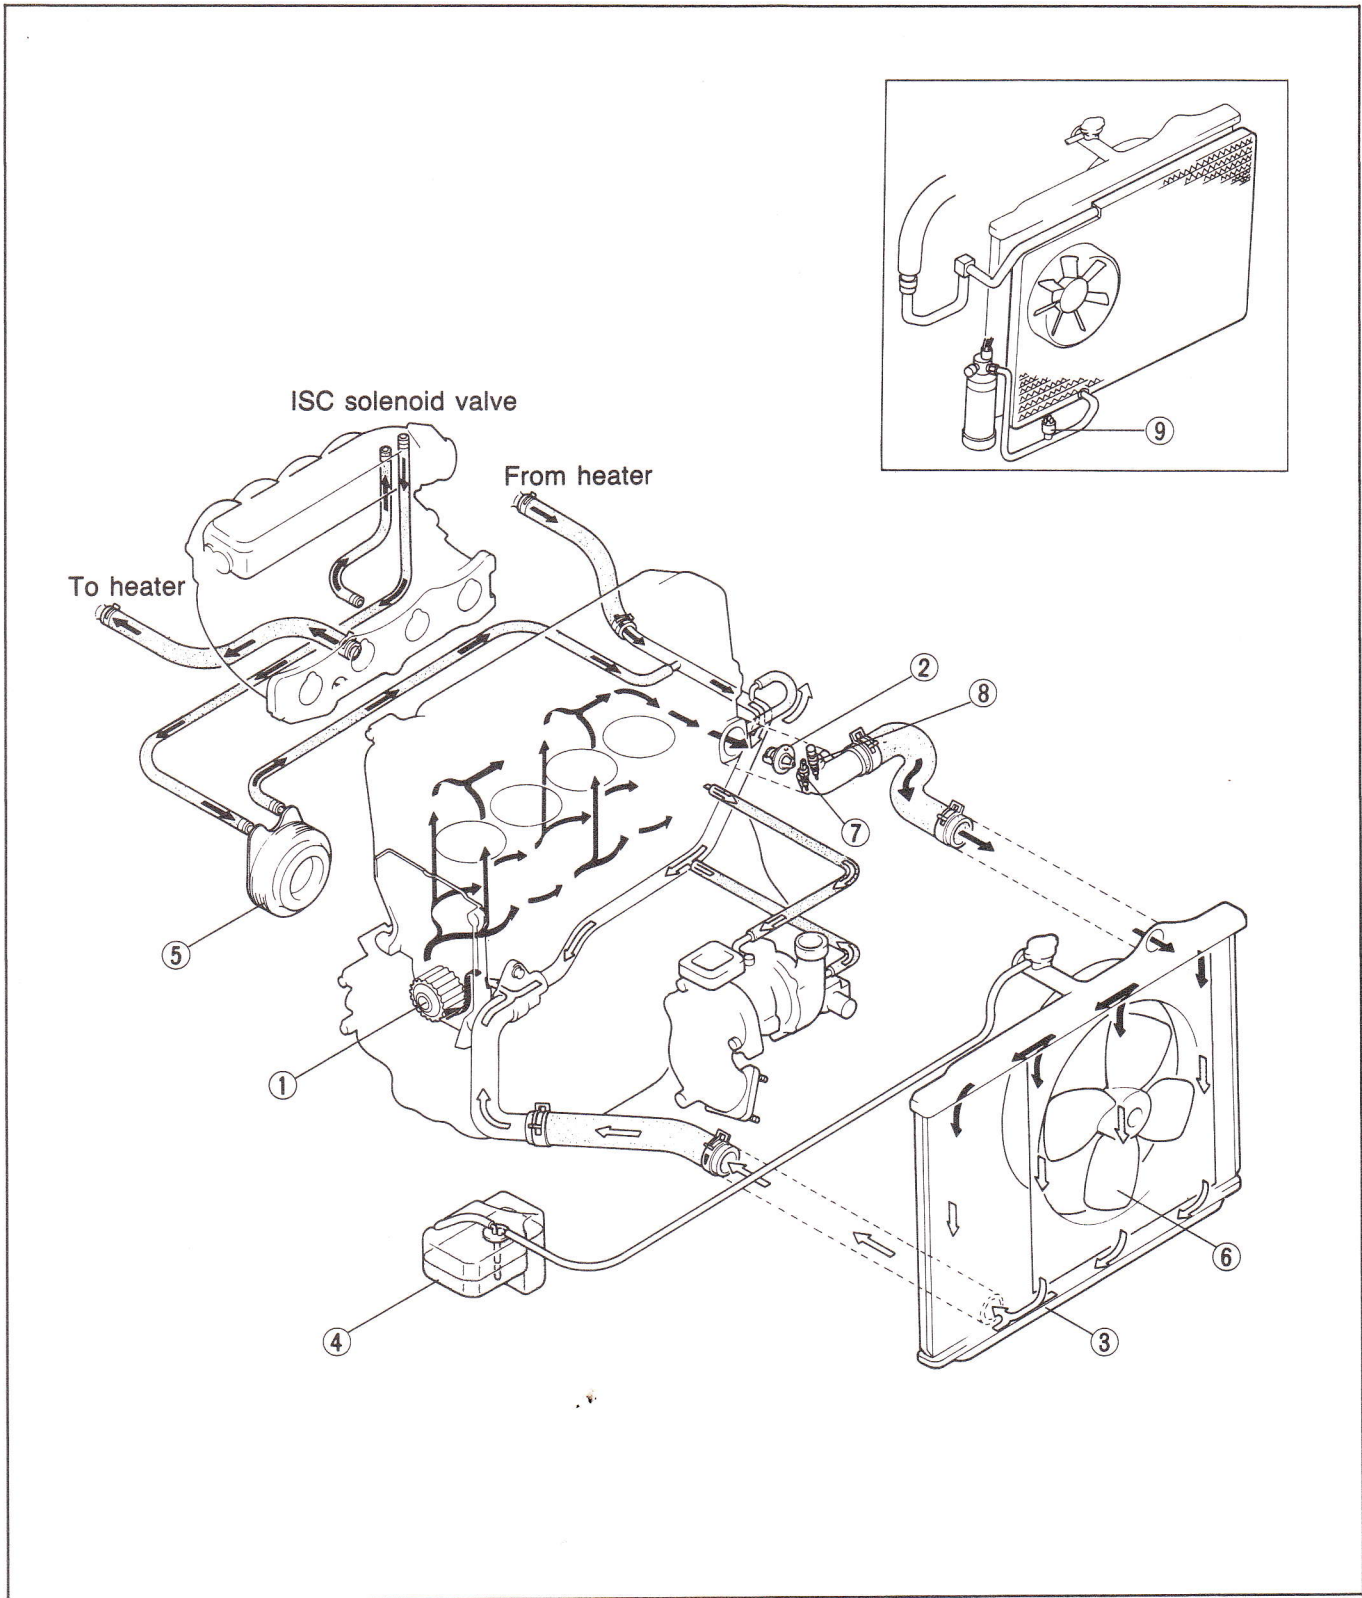

96U03X-002

- 1. Water pump
- 2. Thermostat
- 3. Radiator
- 4. Coolant reservoir
- 5. Oil cooler (only Turbo)

- 6. Cooling fan
- 7. No.1 water thermo switch
- 8. No.2 water thermo switch
- 9. Pressure switch

SPECIFICATIONS

Item		Engine model		F2
Cooling system		Water-cooled, forced circulation		
Coolant capacity liters (US qt, Imp qt)		With heater	7.5 (7.9, 6.6)	
		Without heater	7.0 (7.4, 6.2)	
Water pump	Type		Centrifugal, timing belt driven	
	Water seal		Unified seal	
Thermostat	Type		Wax, 2-stage	
	Opening temperature	°C(°F)	Sub: 83.5—86.5 (182—188), Main: 86.5—89.5 (188—193)	
	Full-open temperature	°C(°F)	100 (212)	
	Full-open lift	mm (in)	Sub: 1.5 (0.06) min., Main: 8.0 (0.31) min.	
Radiator	Type		Corrugated	
	Cap valve opening pressure kPa (kg/cm ² , psi)		74—103 (0.75—1.05, 11—15)	
Cooling fan	Capacity	Turbo	MTX	80
			ATX	160
		Non-Turbo	MTX	80
			ATX	120
	Number of blade		4	
	Outer diameter of blade	mm (in)	MTX	320 (12.6)
			ATX	340 (13.4)


96U03X-003

TROUBLESHOOTING GUIDE


Problem	Possible Cause	Remedy	Page
Overheating	Insufficient coolant	Add	3— 4
	Coolant leakage	Repair	—
	Radiator fins clogged	Clean	3— 6
	Radiator cap malfunction	Replace	3— 5
	Cooling fan malfunction	Repair	3—10
	Thermostat malfunction	Replace	3— 9
	Water passage clogged	Clean	3— 4
	Water pump malfunction	Repair or replace	3— 7
Corrosion	Impurities in coolant	Replace	3— 4

96U03X-004


3 COOLANT

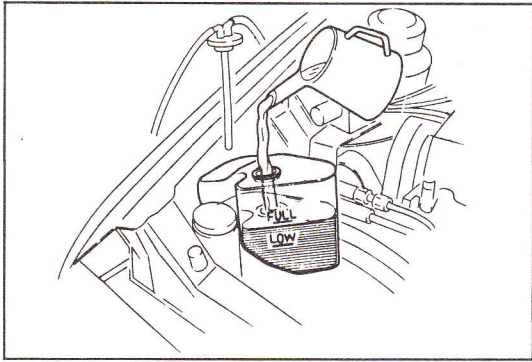


96U03X-005

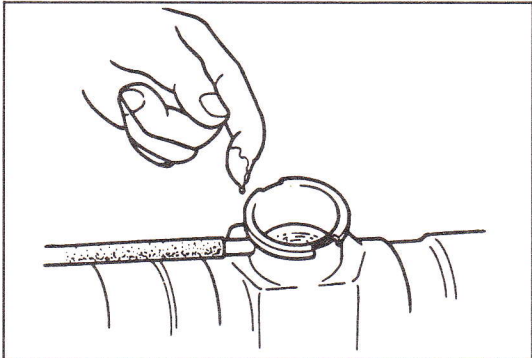

69G03A-006

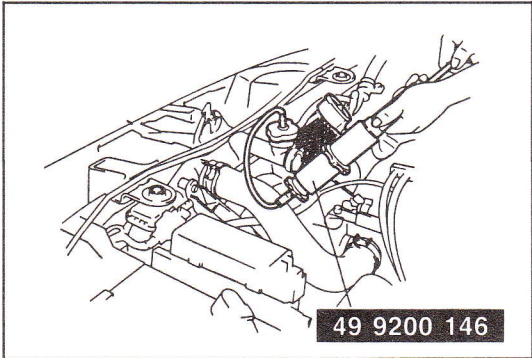

86U03X-005

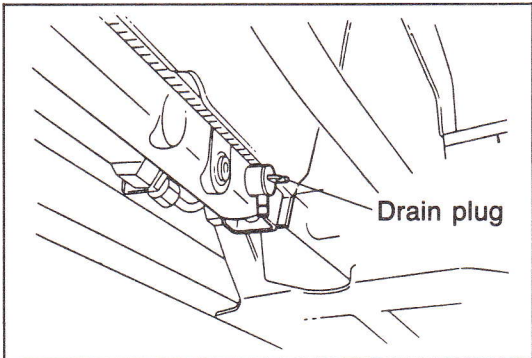

86U03X-006

COOLANT

INSPECTION

Coolant Level (Engine cold)

1. Check that the coolant level is near the radiator inlet port.
2. Check that the coolant level in the coolant reservoir is between the FULL and LOW marks.
Add coolant if necessary.

Warning

- a) **Never remove the radiator cap while the engine is hot.**
- b) **Wrap a thick cloth around the cap when removing it.**

Coolant Quality

1. Check that there is no build-up of rust or scales around the radiator cap or radiator filler neck.
2. Check that coolant is free from oil.
3. Replace the coolant, if necessary.

Coolant Leakage

1. Connect a tester and **SST** to the radiator inlet port.
2. Apply **103 kPa (1.05 kg/cm², 15 psi)** pressure to the system.
3. Check that the pressure is held.
If not, check for coolant leakage.

Warning


When removing either the radiator cap or the tester, loosen it slowly until the pressure in the radiator is released, and then remove it.

REPLACEMENT

1. Remove the radiator cap and loosen the drain plug.
2. Drain the coolant into a suitable container.

Warning

- a) **Never open the radiator cap while the engine is hot.**
- b) **Wrap a thick cloth around the cap when loosening.**
- c) **Use caution when draining hot coolant.**

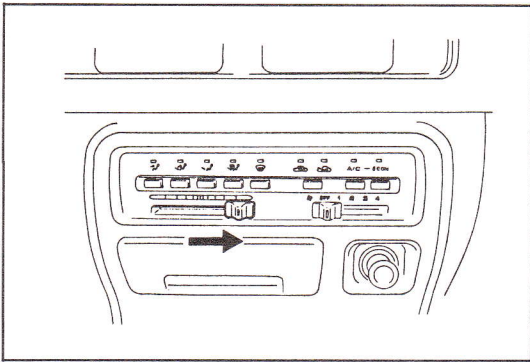

86U03X-028


3. Set the heater control switch to the maximum heat position.
4. Flush the cooling system with water until all traces of color are gone, then let the system drain completely.
5. Fill with the proper mixture and amount of ethylene glycol-based coolant.

Caution

- a) Do not use alcohol- or methanol-based coolant.
- b) Use only soft (demineralized) water in the coolant mixture.


Anti-freeze solution mixture percentage

Protection	Volume percentage		Gravity at 20°C (68°F)
	Solution	Water	
Above -16°C (3°F)	35	65	1.054
Above -26°C (-15°F)	45	55	1.066
Above -40°C (-40°F)	55	45	1.078

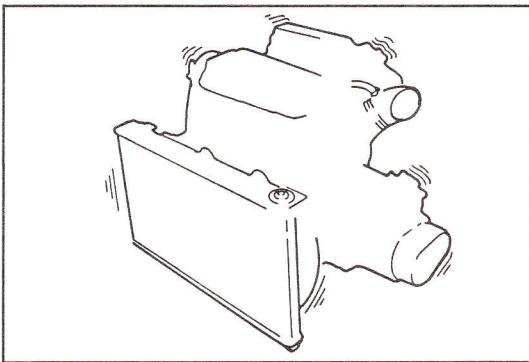

86U03X-007

6. Run the engine at idle with the radiator cap removed. Let any air bleed from the system, and add more coolant.
7. Install the radiator cap, and inspect all connections for leakage.

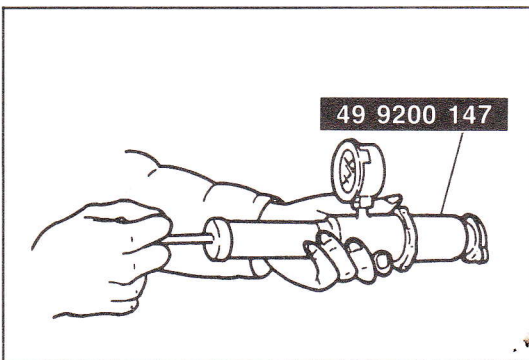

86U03X-008

RADIATOR CAP


INSPECTION

Radiator Cap Valve

1. Remove foreign material (such as water residue) from between the radiator cap valve and the valve seat.
2. Attach the radiator cap to a tester with the **SST**. Apply pressure gradually to **74—103 kPa (0.75—1.05 kg/cm², 11—15 psi)**.
3. Wait about 10 seconds; then check that the pressure has not decreased.

Negative Pressure Valve

1. Pull the negative-pressure valve to open it. Check that it closes completely when released.
2. Check for damage on the contact surfaces, and for cracked or deformed seal packing.
3. Replace the radiator cap if necessary.

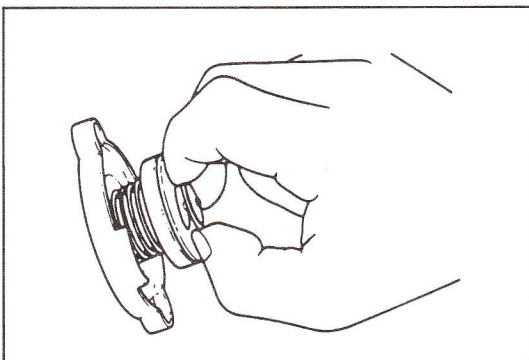

86U03X-009

3 RADIATOR

RADIATOR


REMOVAL AND INSTALLATION

1. Drain the engine coolant.
2. Remove in the sequence shown in the figure.
3. Install in the reverse order of removal.

Note

- a) Position the hose clamp in the original location on the hose.
- b) Squeeze the clamp lightly with large pliers to ensure a good fit.


86U03X-010

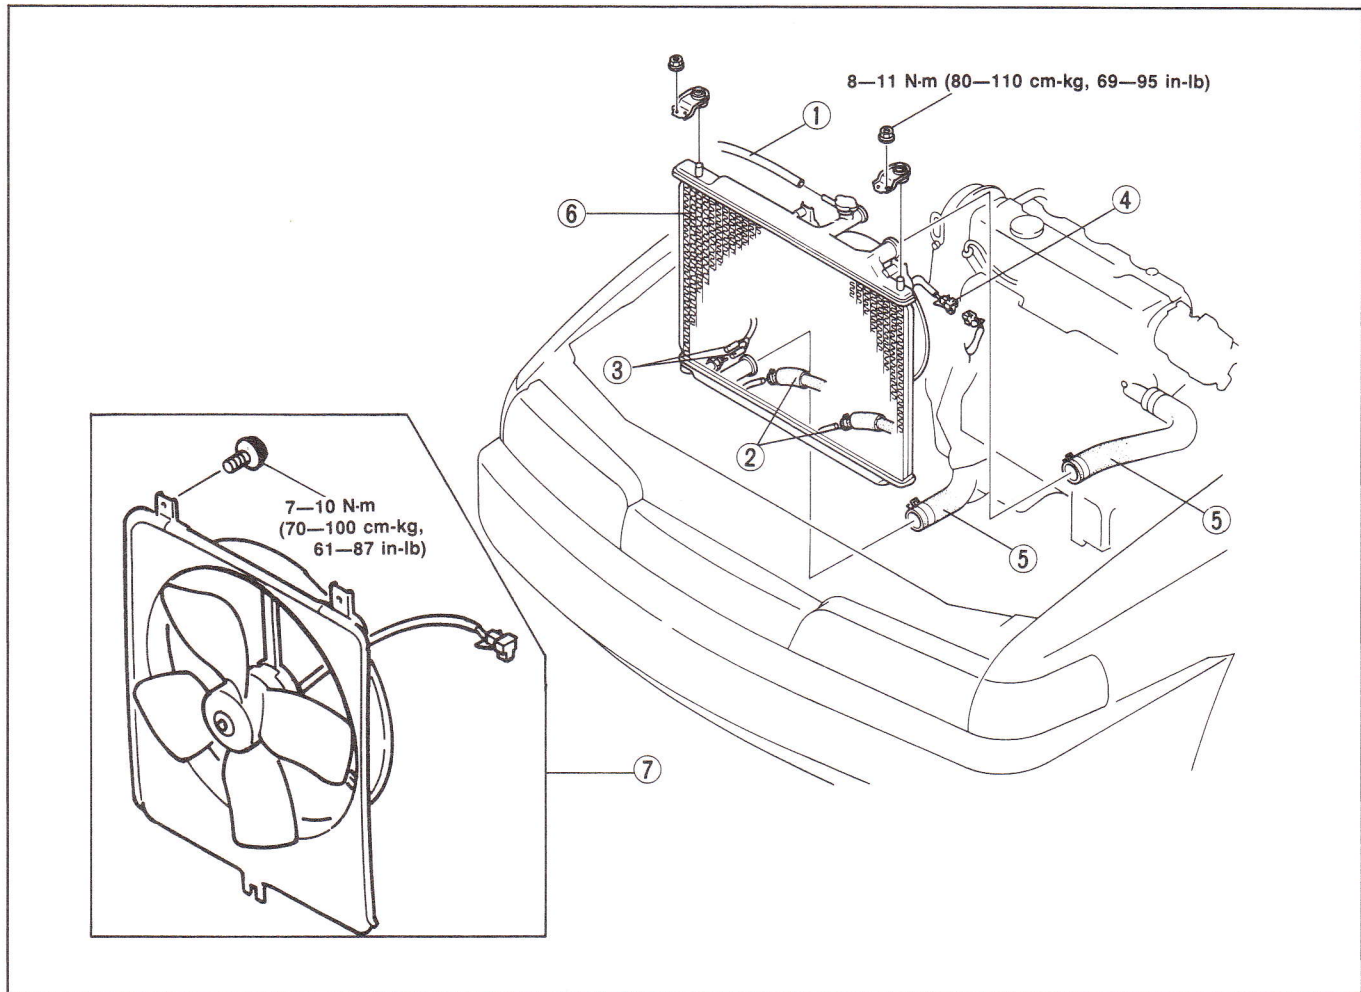

96U03X-006

1. Coolant reservoir hose
2. ATF hose (ATX)
3. Water thermo switch connector
4. Cooling fan connector

5. Upper and lower radiator hose
6. Cooling fan and radiator assembly
7. Cooling fan

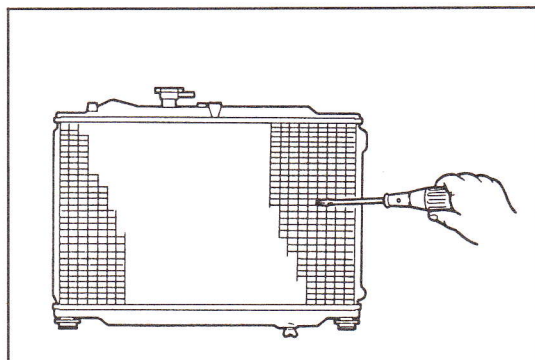

INSPECTION

Check the following points. Repair or replace if necessary.

1. Cracks, damage, or water leakage
2. Bent fins (Repair with a screwdriver)
3. Distorted or bent radiator inlet.


86U03X-012

WATER PUMP

REMOVAL

1. Disconnect the negative battery cable.
2. Turn the crankshaft so that the No. 1 cylinder is at TDC of compression.
3. Drain the engine coolant.
4. Remove in the sequence shown in the figure.

69G03A-025

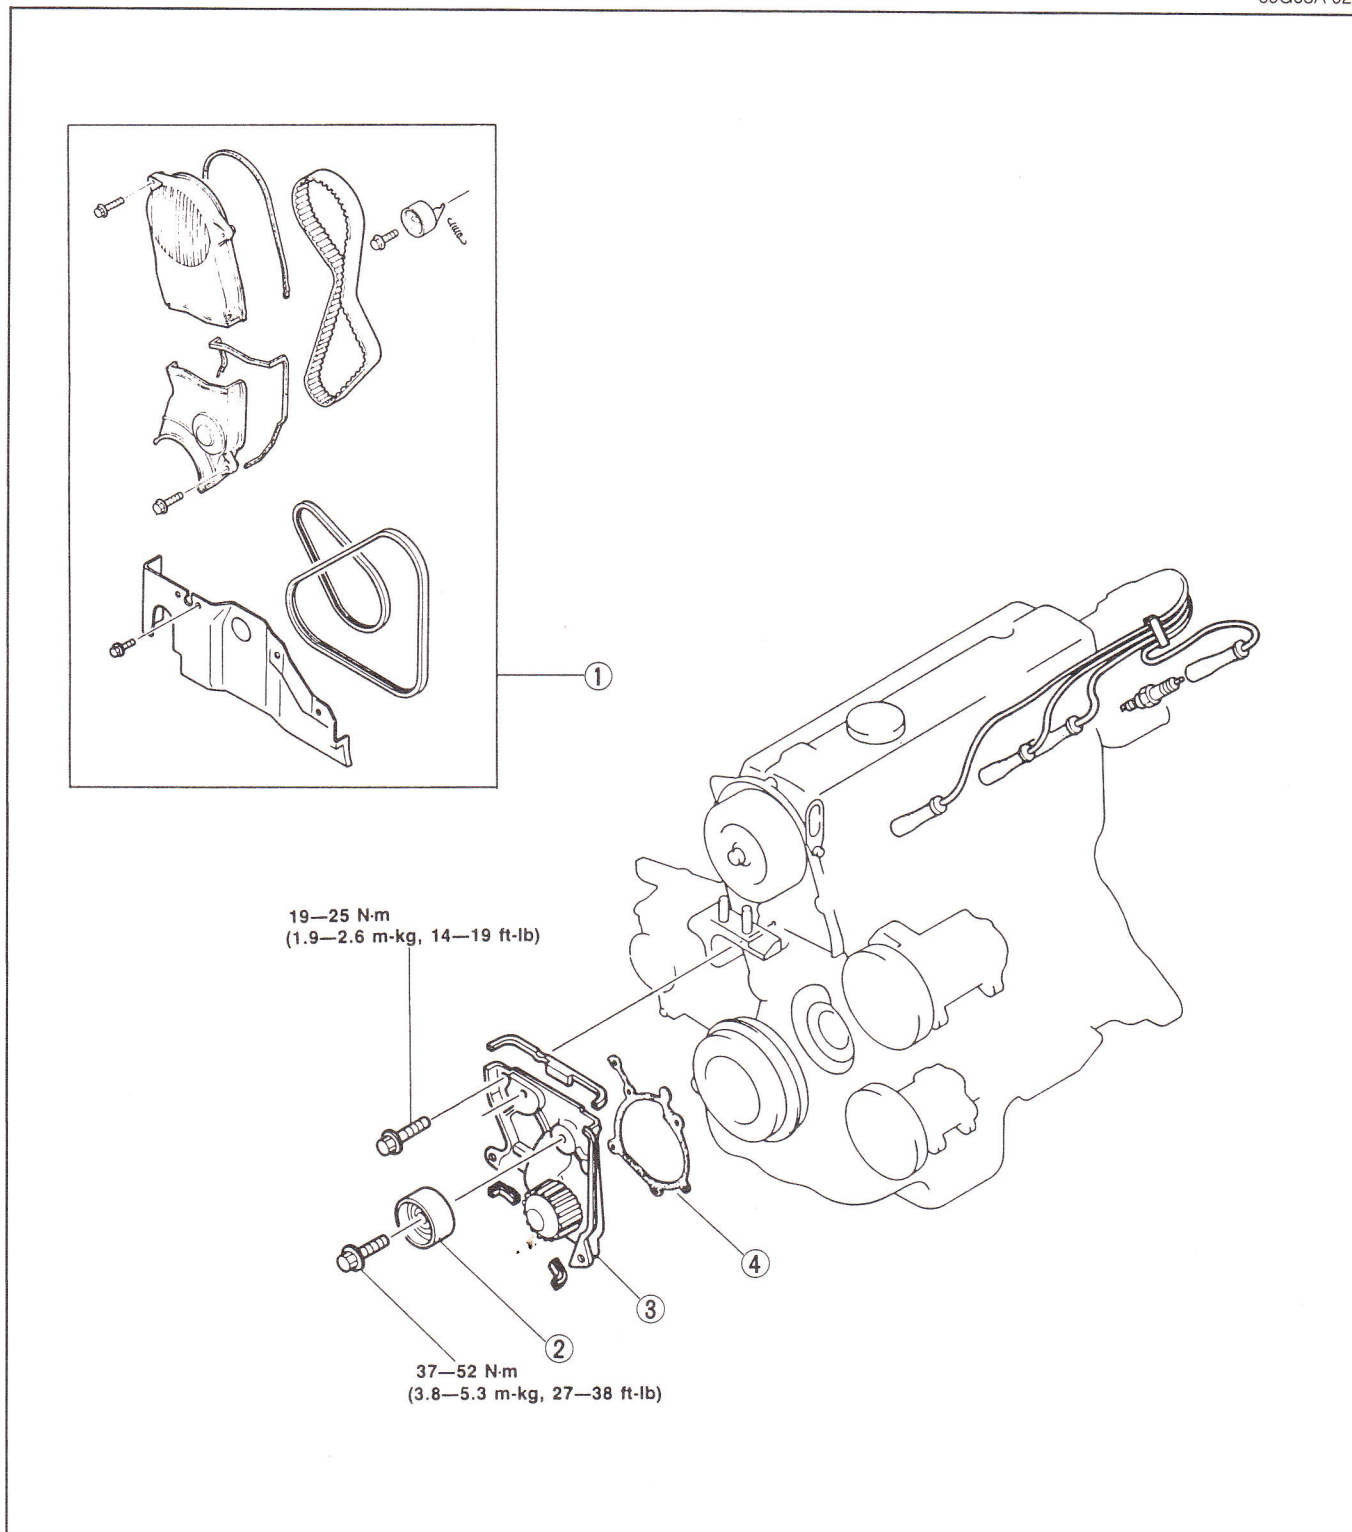


96U03X-007


1. Timing belt (Refer to Section 1)
2. Idler pulley

3. Water pump
4. Gasket


3 WATER PUMP

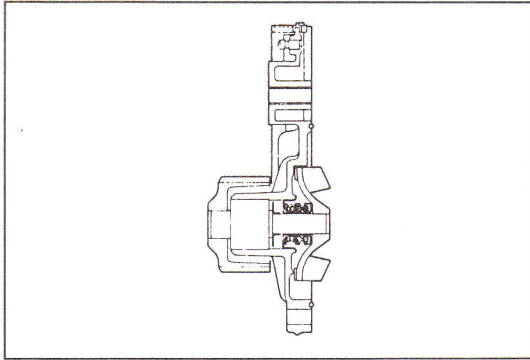

96U03X-012

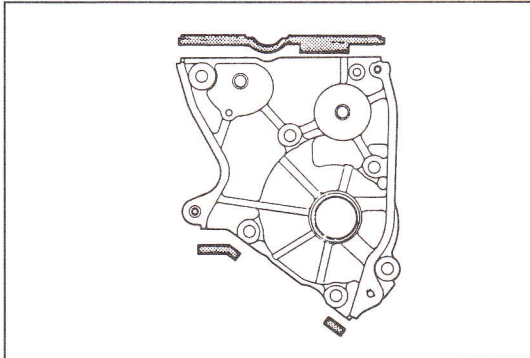

96U03X-008

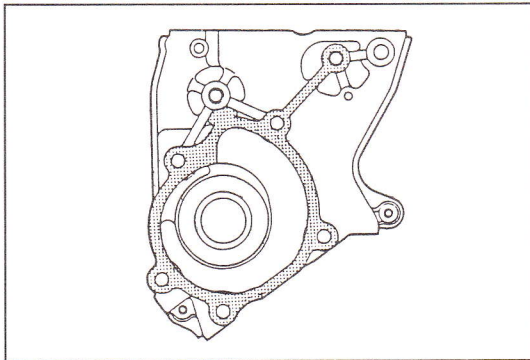

96U03X-009

INSPECTION

Check the following. Replace the water pump if necessary.

1. Cracks or damage
2. Abnormal noise, bearing sticking or looseness.

INSTALLATION

Install in the reverse order of removal, referring to the installation note.

Installation Note

Rubber seal

Install the rubber seals on the water pump.

Water pump


1. Remove any gasket fragments, dirt, or oil from the contact surfaces.
2. Install a new gasket on the water pump.
3. Install the water pump.

Tightening torque:


19—25 N·m (1.9—2.6 m·kg, 14—19 ft·lb)

Steps After Installation


1. Supply the specified amount and type of coolant.
2. Start the engine and check for leakage.

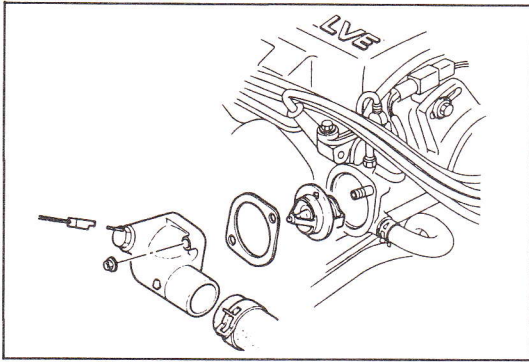


69G03B-010

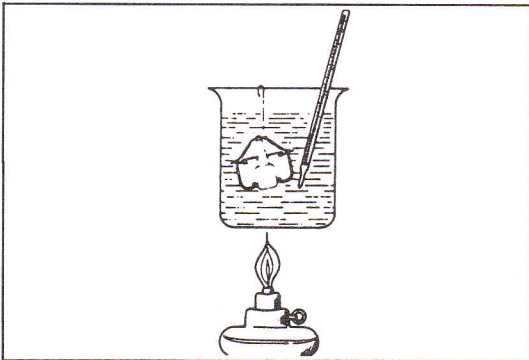

96U03X-010

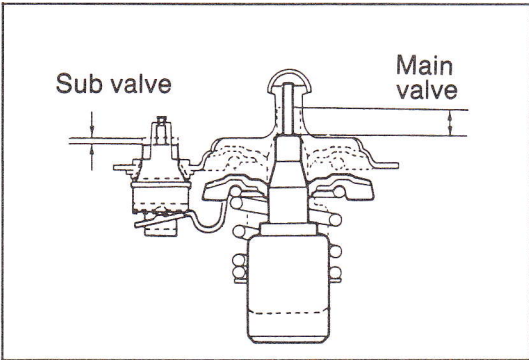

69G03B-012

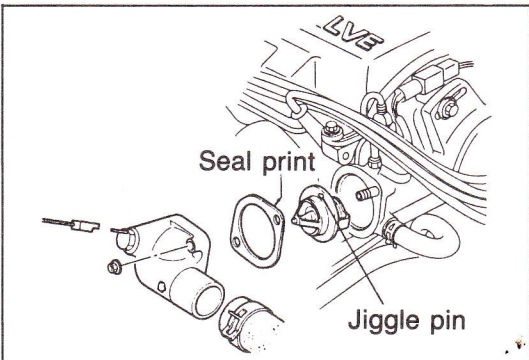

86U03X-018

THERMOSTAT

REMOVAL

1. Drain the engine coolant.
2. Remove the thermostat cover.
3. Remove the thermostat.

INSPECTION

Check the thermostat. Replace if necessary.

1. Visually check that the valve is airtight.
2. Place the thermostat and a thermometer in water.
3. Gradually heat the water and check the following:

Initial opening temperature

Sub valve : 83.5—86.5°C (182—188°F)

Main valve: 86.5—89.5°C (188—193°F)

Full-open temperature: 100°C (212°F)

Full-open lift

Sub valve : 1.5 mm (0.06 in) min.

Main valve: 8.0 mm (0.31 in) min.

INSTALLATION

1. Install the thermostat into the cylinder head with jiggle pin at the top.
2. Install a new gasket with the seal print side facing the cylinder head.
3. Install the thermostat cover.

Tightening torque:


19—30 N·m (1.9—3.1 m·kg, 14—22 ft·lb)

4. Replenish the coolant.
5. Start the engine and check for leaks.

3 COOLING FAN

COOLING FAN

SYSTEM CIRCUIT

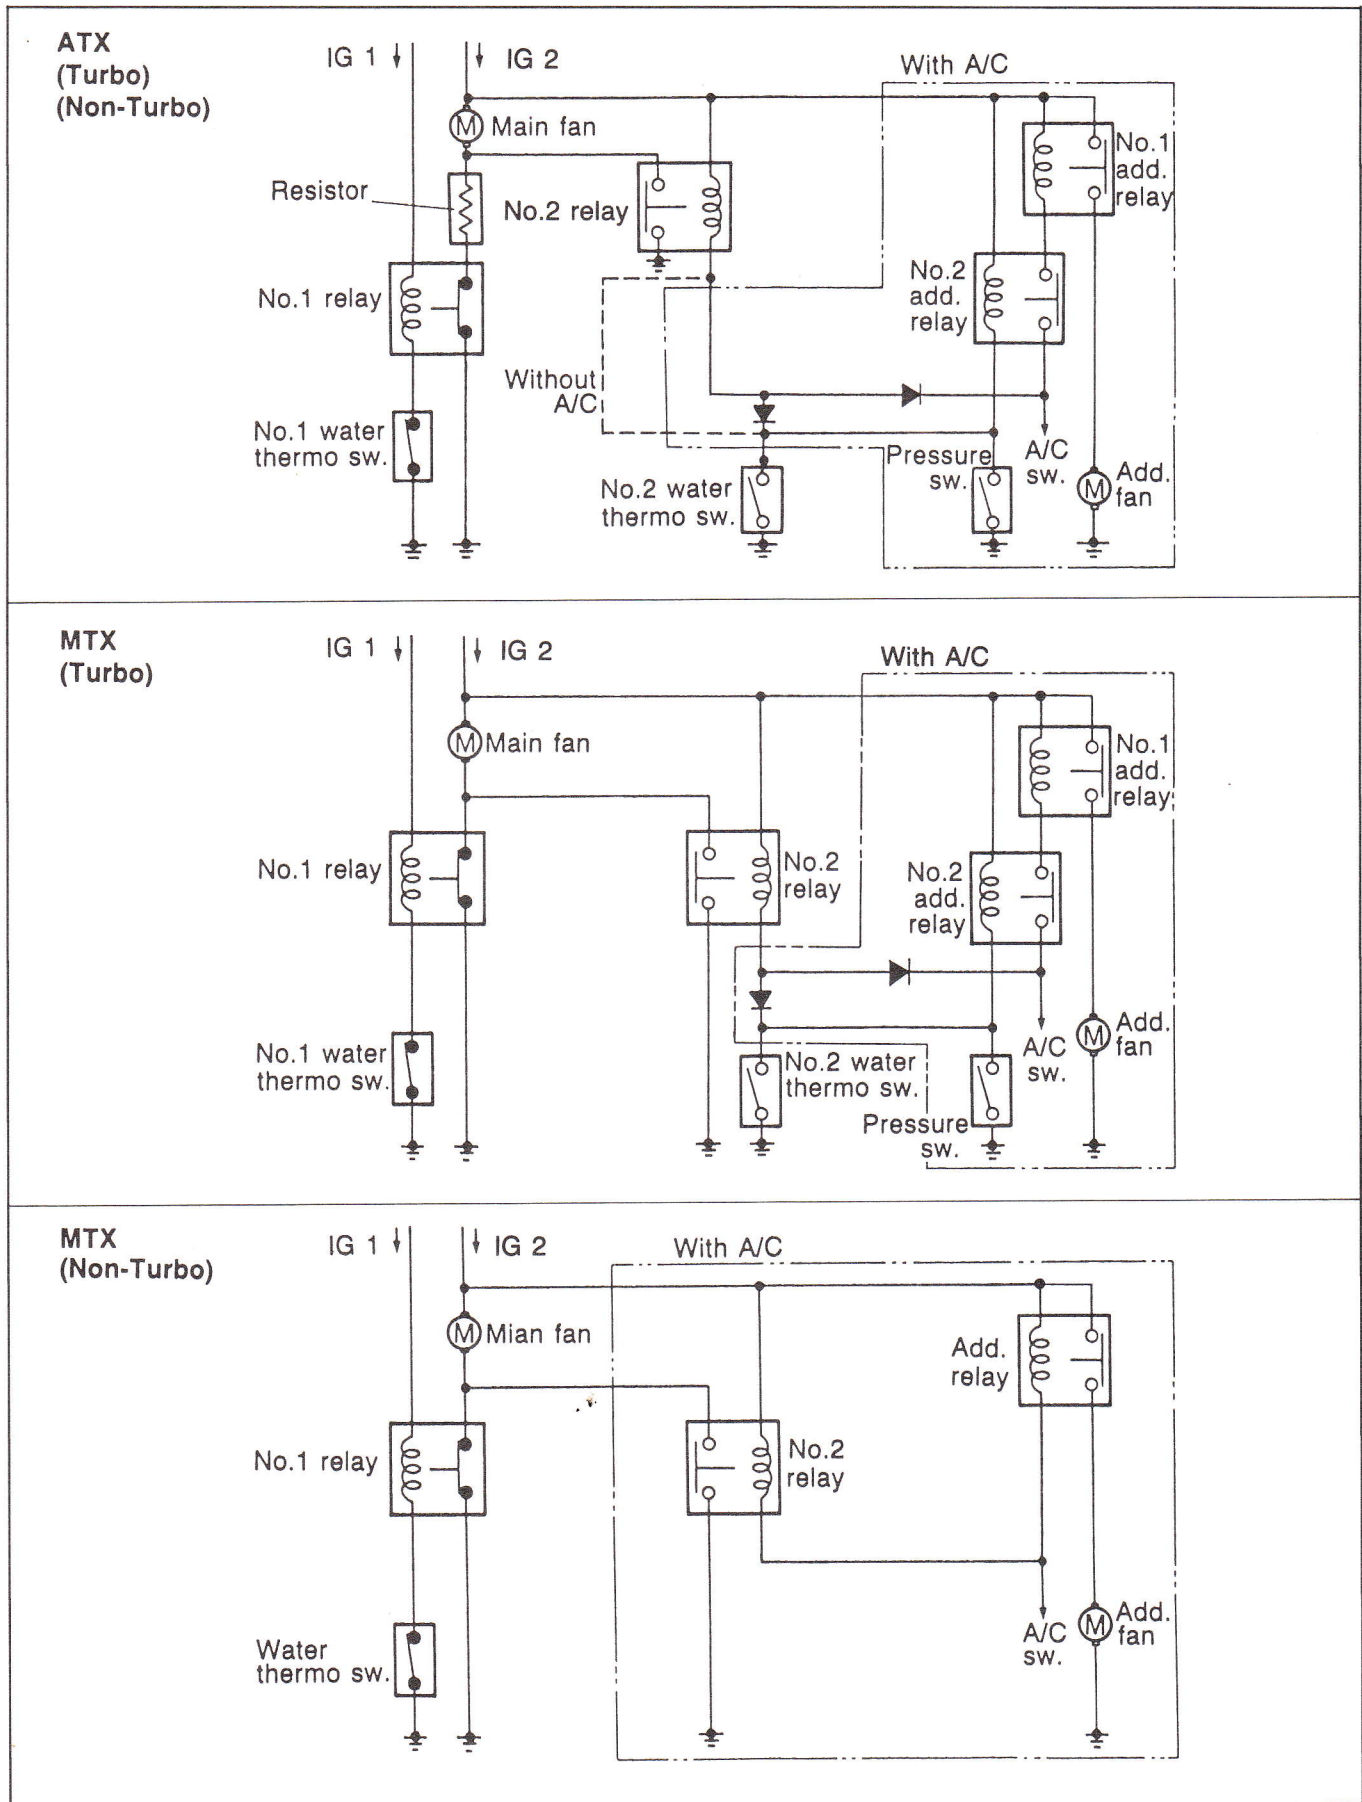

CIRCUIT INSPECTION

Check the cooling fan operation.

Condition	Operating fan				
	With A/C			Without A/C	
	ATX	MTX		ATX	MTX
		Turbo	Non-Turbo		
Coolant temp. over 97°C (177°F)	Main (Lo)	Main	Main	Main (Lo)	Main
Coolant temp. over 108°C (226°F)	Main (Hi)	Main	—	Main (Hi)	—
A/C switch ON	Main (Hi)	Main	Main, Additional	—	
Pressure switch ON	Main (Hi), Additional	Main, Additional	—		


96U03X-011

FAN MOTOR

Removal and Installation

1. Remove in the sequence shown in the figure.
2. Install in the reverse order of removal.


86U03X-021

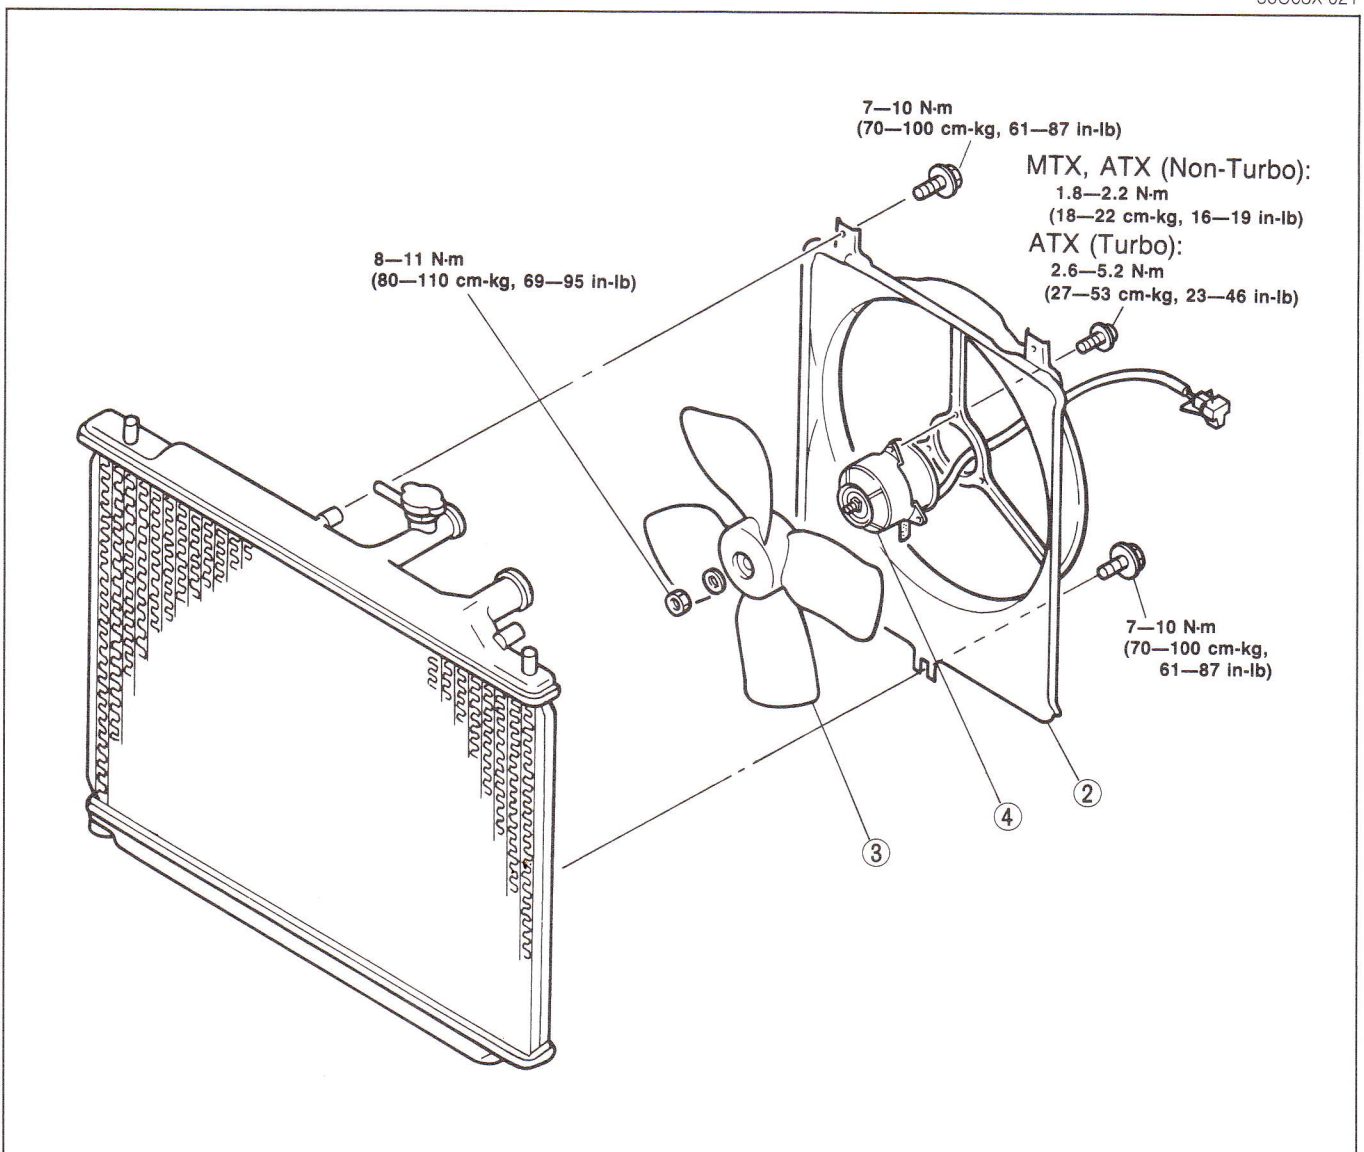


76G03X-608

1. Cooling fan assembly (Refer to page 3—6)
2. Cowling
3. Fan
4. Fan motor


3 COOLING FAN

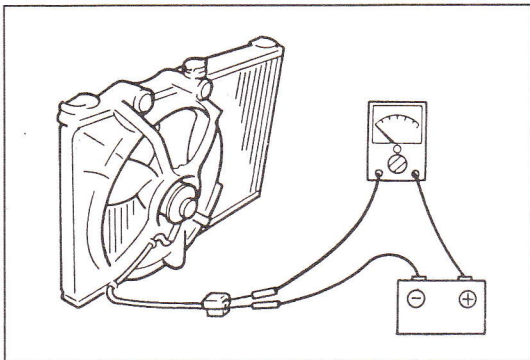

96U03X-013

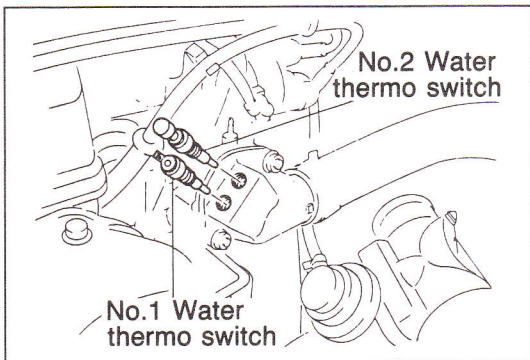

76G03X-609

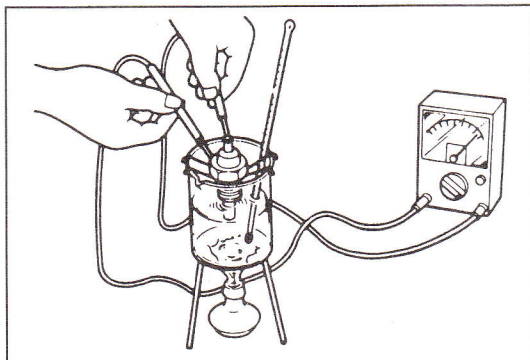

86U03X-025

Inspection

1. Connect an ammeter and battery to the fan motor connectors.
2. Check that the fan motor operates smoothly at the specified current.

Current

(A)

Turbo	MTX	5.6—7.6
	ATX	10.6—16.6
Non-Turbo	MTX	5.6—7.6
	ATX	8.0—11.0

3. Replace the fan motor if necessary.

WATER THERMO SWITCH

1. Remove the cooling fan water thermo switch.

Note

Make sure that the ignition switch is OFF. If not, the fan will operate when the connector is removed.

2. Place the water thermo switch in water.
3. Heat the water gradually, and check for continuity of the switch with an ohmmeter. Replace if necessary.

No.1 water thermo switch:

over 97°C (207°F) ON → OFF

No.2 water thermo switch:

over 108°C (226°F) OFF → ON

4. Install the water thermo switch and a new O-ring.

Caution

Do not use sealing tape.